

PRODUCT-DETAILS

1722-299-500

1722-299-500 Cover Frame 2gang(s) maison-beige Horizontal mounting - Busch-axcent



Informations générales

Extension du type de produit	1722-299-500
Code de produit	2CKA001754A4482
EAN	4011395165287
Description courte	1722-299-500 Cover Frame 2gang(s) maison-beige Horizontal mounting - Busch-axcent
Description longue	For vertical or horizontal installation.

Technique

Number of Gangs	2
Design Range	Busch-axcent
Type de montage	Flush Mounted
Type of Fastening	Clamp
Sens de montage	Horizontal Vertical
Finition de surface	Untreated Glossy
Matériau	Thermoplastic
Label Space Provided	No
Couleur	maison-beige
Poids de la batterie	0 g

Environnement

Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E2814
REACH Declaration	2CKA309999E9999

Dimensions

Poids net	48 g
-----------	------

Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 10 pièce
Emballage Niveau 1 Poids	550 g
Code douanier	85389099
E-Number (Sweden)	1815238
Pays d'origine	Germany (DE)

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA200000E2814
--------------------------------	-----------------

Classifications

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices
Catégorie DEEE	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144001

Accessories

Identifiant	Description	Type	Quantity	Unit Of Measure
2CKA001731A1916	1720-84 Rocker Switch Pull cord studio white - 63x63	1720-84	1	piece
2CKA001710A3808	1740 DR/03-84 Cover Plate Level switch Turn button studio white - 63x63	1740 DR/03-84	1	piece
2CKA001710A3512	1740 DRL-84-503 Cover Plate Level switch Turn button Symbol "3-level switch" studio white - 63x63	1740 DRL-84-503	1	piece
2CKA001710A3172	1740-84 Cover Plate Venetian blind Turn button studio white - 63x63	1740-84	1	piece
2CKA001710A3161	1742-84 Cover Plate Blind cap 1 gang(s) with Mounting plate studio white - 63x63	1742-84	1	piece
2CKA001710A3991	1742-84-500 Inserts with Cover Plate Blind cap 1 gang(s) 0 pole studio white - 63x63	1742-84-500	1	piece
2CKA001724A4368	1743/10-04-84 Cover Plate SAT 1 gang(s) 4 gang(s) studio white - 63x63	1743/10-04-84	1	piece

2CKA001724A4377	1743-04-84 Cover Plate TV / Radio / 2x SAT 1 gang(s) 4 gang(s) studio white - 63x63	1743-04-84	1	piece
2CKA001724A4332	1743-84-500 Cover Plates SAT 1 gang(s) 3 gang(s) studio white - 63x63	1743-84-500	1	piece
2CKA001710A3173	1745-84 Cover Plate telephone connector boxes (VDo) 1 gang(s) studio white - 63x63	1745-84	1	piece
2CKA001710A3993	1746/10-84-500 Cover Plates Telecommunication inserts 0 gang(s) studio white - 63x63	1746/10-84-500	1	piece
2CKA001710A3167	1746-84 Intermediate Ring Telecommunication inserts 50 x 50 mm 1 gang(s) with Hinged Lid studio white - 63x63	1746-84	1	piece
2CKA001710A4096	1747 BSI-84 Intermediate Ring Cover plates Busch-Balance® SI studio white - 63x63	1747 BSI-84	1	piece
2CKA001710A3863	1747 SI-84 Cover Plates studio white - 63x63	1747 SI-84	1	piece
2CKA001710A3861	1747-84 Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI studio white - 63x63	1747-84	1	piece
2CKA001710A3656	1748-84 Cover Plate Data connection 2 gang(s) studio white - 63x63	1748-84	1	piece
2CKA001710A3163	1749-84 Cover Plate Cable outlet 1 gang(s) 0 gang(s) studio white - 63x63	1749-84	1	piece
2CKA001710A3166	1750-84 Cover Plate BNC/TNC 2 gang(s) studio white - 63x63	1750-84	1	piece
2CKA001723A0240	1751-84 Cover Plate Loudspeaker 2 gang(s) studio white - 63x63	1751-84	1	piece
2CKA001710A3175	1755 SL/PZ-84-101 Cover Plate Venetian blind Key studio white - 63x63	1755 SL/PZ-84-101	1	piece
2CKA001753A0092	1756-84 Cover Plate Info light studio white - 63x63	1756-84	1	piece
2CKA001724A2761	1758-84 Cover Plate For data connection housing 2 gang(s) studio white - 63x63	1758-84	1	piece
2CKA001710A4106	1762-84-506 Cover Plates TDO 1 gang(s) 1 gang(s) studio white - 63x63	1762-84-506	1	piece
2CKA001731A1877	1764 NLI-84 Rocker Switch/push button Single push button with Pilot lamp studio white - 63x63	1764 NLI-84	1	piece
2CKA001710A3992	1766-84-500 Cover Plates TAE 1 gang(s) 0 gang(s) studio white - 63x63	1766-84-500	1	piece
2CKA001753A0258	1770-84-103 Cover Plate Time switch Toggle studio white - 63x63	1770-84-103	1	piece
2CKA001753A0301	1771-84-103 Cover Plate Time switch Toggle studio white - 63x63	1771-84-103	1	piece
2CKA001751A3099	1785 JA/02-84 Rocker Venetian blind Two-part rocker Symbol "arrows" studio white	1785 JA/02-84	1	piece
2CKA001751A3088	1785 JA-84-500 Cover Plates Venetian blind Two-part rocker Symbol "arrows" studio white - 63x63	1785 JA-84-500	1	piece
2CKA001751A3128	1785 K-84-500 Cover Plates Switch/push button Two-part rocker None studio white - 63x63	1785 K-84-500	1	piece
2CKA001751A2992	1785/11-84 Rocker Switch/push button Two-part rocker studio white - 63x63	1785/11-84	1	piece
2CKA001751A3076	1785-84-500 Cover Plates Switch/push button Two-part rocker Without imprint studio white - 63x63	1785-84-500	1	piece
2CKA001751A3098	1786 JA/02-84 Rocker Venetian blind Single rocker studio white	1786 JA/02-84	1	piece
2CKA001751A2998	1786/11-84 Rocker Switch/push button Single rocker studio white - 63x63	1786/11-84	1	piece
2CKA001751A3074	1786-84-500 Cover Plates Switch/push button Single rocker Without imprint studio white - 63x63	1786-84-500	1	piece
2CKA001751A2750	1788-84 Rocker Switch/push button Single rocker studio white - 63x63	1788-84	1	piece
2CKA001751A2751	1789 H-84 Rocker Switch/push button Single rocker Heizung studio white - 63x63	1789 H-84	1	piece
2CKA001751A2754	1789 KI-84 Rocker Switch/push button Single rocker Symbol "bell" studio white - 63x63	1789 KI-84	1	piece

2CKA001751A3084	1789 LI-84-500 Cover Plates Switch/push button Single rocker Symbol "light" studio white - 63x63	1789 LI-84-500	1	piece
2CKA001751A3151	1789 N-84-500 Cover Plates Switch/push button Single rocker Without imprint studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3161	1789 ST-84-500 Cover Plates Switch/push button Single rocker Various symbols studio white - 63x63	1789 ST-84-500	1	piece
2CKA001751A2755	1789 TR-84 Rocker Switch/push button Single rocker studio white - 63x63	1789 TR-84	1	piece
2CKA001751A3091	1789-84-500 Cover Plates Switch/push button Single rocker Without imprint studio white - 63x63	1789-84-500	1	piece
2CKA001710A4113	1790-592-84 Cover Plate Medical alarm studio white - 63x63	1790-592-84	1	piece
2CKA001710A3698	1794 TA-84 Cover Plate Thermostat Turn button studio white - 63x63	1794 TA-84	1	piece
2CKA001710A3544	1794-84 Cover Plate Thermostat studio white - 63x63	1794-84	1	piece
2CKA001710A4017	1795 HK-84 Cover Plate Thermostat Turn button studio white - 63x63	1795 HK-84	1	piece
2CKA001710A4049	1795 HKEA-84 Cover Plate Thermostat Turn button 1 switchover studio white - 63x63	1795 HKEA-84	1	piece
2CKA001710A3725	1795 TA-84 Cover Plate Thermostat Turn button studio white - 63x63	1795 TA-84	1	piece
2CKA001710A3569	1795-84 Cover Plate Thermostat Turn button studio white - 63x63	1795-84	1	piece
2CKA001753A0311	1796-84 Cover Plate Pull cord studio white - 63x63	1796-84	1	piece
2CKA001710A3990	1800-84-500 Cover Plates Modular Jack 1 gang (s) 2 gang(s) studio white - 63x63	1800-84-500	1	piece
2CKA001710A1551	1803-02-84-500 Cover Plates UAE/IAE (ISDN) 1 gang(s) 2 gang(s) studio white - 63x63	1803-02-84-500	1	piece
2CKA001710A1550	1803-84-500 Cover Plates UAE/IAE (ISDN) 1 gang(s) 1 gang(s) studio white - 63x63	1803-84-500	1	piece
2CKA002013A5407	20 EUAB-84 Socket insert Busch-Object socket outlet Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	20 EUAB-84	1	piece
2CKA002011A6207	20 EUC-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUC-84-500	1	piece
2CKA002013A5418	20 EUCBDR-84 Socket insert Busch-Service- Socket Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	20 EUCBDR-84	1	piece
2CKA002013A5286	20 EUCBL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter LED/Green 1gang(s) studio white - 63x63	20 EUCBL-84	1	piece
2CKA002013A5294	20 EUCBLI-84 Socket insert Protective Contact (SCHUKO) Safety Shutter LED/White 1gang(s) studio white - 63x63	20 EUCBLI-84	1	piece
2CKA002013A5268	20 EUCKS/DV-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	20 EUCKS/DV-84	1	piece
2CKA002013A5372	20 EUCKS-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUCKS-84-500	1	piece
2CKA002013A5441	20 EUCRB-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUCRB-84-500	1	piece
2CKA002018A1509	20 EUK-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) with Hinged Lid studio white - 63x63	20 EUK-84-500	1	piece
2CKA002018A1520	20 EUKB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKB-84	1	piece
2CKA002018A1529	20 EUKBR-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKBR-84	1	piece

2CKA002018A1540	20 EUKNB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNB-84	1	piece
2CKA002018A1551	20 EUKNBL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNBL-84	1	piece
2CKA002018A1563	20 EUKNBSL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNBSL-84	1	piece
2CKA002018A1564	20 EUKNBSL-84-101 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNBSL-84-101	1	piece
2CKA002011A6209	20 EUN-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUN-84-500	1	piece
2CKA002017A0786	20 MUC-84-500 Socket insert 1gang(s) studio white - 63x63	20 MUC-84-500	1	piece
2CKA002017A0807	20 MUCKS-84-500 Inserts with Cover Plate 1gang(s) studio white - 63x63	20 MUCKS-84-500	1	piece
2CKA001751A3170	2029 UC-84 Bell push-switch DND / MUR insert Bell Single push button studio white - 63x63	2029 UC-84	1	piece
2CKA002495A0086	2095 UC-84 Socket insert Equipotential compensation studio white - 63x63	2095 UC-84	1	piece
2CKA002190A0215	2190 EUC-84 Inserts with Cover Plate 1gang(s) studio white	2190 EUC-84	1	piece
2CKA002013A5477	23 EUCEB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	23 EUCEB-84	1	piece
2CKA002013A5451	2300 EUCEB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	2300 EUCEB-84	1	piece
2CKA002113A0511	2300 UCRKS-84-503 Inserts with Cover Plate 1gang(s) studio white - 63x63	2300 UCRKS-84-503	1	piece
2CKA002011A3833	2310 EUGL/VA-84-11 Socket insert Busch-Protector® Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	2310 EUGL/VA-84-11	1	piece
2CKA002099A0214	2399 UCKS-84 Socket insert Safety Shutter 1gang(s) studio white - 63x63	2399 UCKS-84	1	piece
2CKA002099A0192	2399 UCKS-84-505 Inserts with Cover Plate 1gang(s) studio white - 63x63	2399 UCKS-84-505	1	piece
2CKA001719A0220	2518-WD-84 Intermediate Ring with Hinged Lid 1 gang(s) studio white - 63x63	2518-WD-84	1	piece
2CKA001751A3180	2520 KI-84-500 Cover Plates Switch/push button Single rocker studio white - 63x63	2520 KI-84-500	1	piece
2CKA001751A3199	2520 TR-84 Rocker Switch/push button Single rocker studio white - 63x63	2520 TR-84	1	piece
2CKA001724A4256	2533-84 Cover Plate Bore hole 1 gang(s) studio white - 63x63	2533-84	1	piece
2CKA001710A3646	2542 DR/01-84 Cover Plate Level switch Turn button Symbol "0-1-2-3" studio white - 63x63	2542 DR/01-84	1	piece
2CKA001710A3651	2542 DR/02-84 Cover Plate Level switch Turn button Symbol "1-2-3" studio white - 63x63	2542 DR/02-84	1	piece
2CKA001724A4388	2548-022 AR-84 Cover Plate Doctor Blue 1 button (s) studio white - 63x63	2548-022 AR-84	1	piece
2CKA001724A4402	2553-84 Cover Plate XLR 1 gang(s) 1 gang(s) studio white - 63x63	2553-84	1	piece
2CKA001753A0394	2561-02-84 Cover Plate Modular Jack 1 gang(s) 2 gang(s) studio white - 63x63	2561-02-84	1	piece
2CKA001753A0403	2561-84 Cover Plate Modular Jack 1 gang(s) 1 gang(s) studio white - 63x63	2561-84	1	piece
2CKA003116A0662	3120 EUCEB-84 Socket insert FI-Schukomat Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - solo	3120 EUCEB-84	1	piece
2CKA003117A0006	3151 UC-84 RCD - Insert Buschmat 30 mA studio white - 63x63	3151 UC-84	1	piece

2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84-500	1	piece
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84-500	1	piece
2CKA006132A0379	6122/10-84-500 BW standard	6122/10-84-500	1	piece
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84-500	1	piece
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84-500	1	piece
2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84-500	1	piece
2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84-500	1	piece
2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84-500	1	piece
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84-500	1	piece
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84-500	1	piece
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84-500	1	piece
2CKA006430A0400	6430-84-102-500 Cover Plates Venetian blind Symbol "arrows" studio white - 63x63	6430-84-102-500	1	piece
2CKA006430A0306	6435-84 Cover Plate Time switch studio white - 63x63	6435-84	1	piece
2CKA006470A0004	6476-84 Cover Plate Proximity switch studio white - 63x63	6476-84	1	piece
2CKA006400A0059	6477-84 Cover Plate PowerDock 1 gang(s) studio white	6477-84	1	piece
2CKA006400A0047	6480/11-84-500 Complete Devices studio white	6480/11-84-500	1	piece
2CKA006400A0045	6480-84-500 Complete Devices studio white - future linear	6480-84-500	1	piece
2CKA006599A3009	6540-84-102-500 Cover Plates Dimmer studio white - 63x63	6540-84-102-500	1	piece
2CKA006599A2835	6541-84 Cover Plate Cooling Central cover plate studio white - 63x63	6541-84	1	piece
2CKA006599A3010	6543-84-101-500 Cover Plates Switch/dimmer Single push button Without imprint studio white - 63x63	6543-84-101-500	1	piece
2CKA006599A2908	6545-84 Control Element Dimmer Two-part button with Neon lamp studio white - 63x63	6545-84	1	piece
2CKA006710A0011	6716 UJ-84-500 Complete Devices studio white - future linear	6716 UJ-84-500	1	piece
2CKA006730A0038	6731-84-500 Cover Plates studio white - 63x63	6731-84-500	1	piece
2CKA006730A0039	6732-84-500 Cover Plates studio white - 63x63	6732-84-500	1	piece
2CKA006730A0040	6733-84-500 Wall sensor studio white - 63x63	6733-84-500	1	piece
2CKA006730A0136	6736 FoH-84 Control Element Switch/dimmer Two-part button studio white	6736 FoH-84	1	piece
2CKA006800A2834	6815-84-101-500 Cover Plates studio white	6815-84-101-500	1	piece
2CKA008200A0081	8253-84 Cover Plate Loudspeaker studio white - 63x63	8253-84	1	piece
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	piece
2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	piece
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	piece
2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	piece
2CKA006200A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84-WL	1	piece
2CKA006220A0139	SR-1-84 rocker 1gang	SR-1-84	1	piece

2CKA006220A0154	SR-2-84 rocker 2gang	SR-2-84	1	piece
2CKA006220A0145	SRB-1-84 rocker 1gang, blinds	SRB-1-84	1	piece
2CKA006220A0160	SRB-2-84 rocker 2g, blinds	SRB-2-84	1	piece
2CKA006220A0151	SRD-1-84 rocker 1gang, dimming	SRD-1-84	1	piece
2CKA006220A0166	SRD-2-L-84 rocker 2g, left, dimming	SRD-2-L-84	1	piece
2CKA006220A0260	SRD-2-R-84 rocker 2g, right, dimming	SRD-2-R-84	1	piece
2CKA006220A0142	SRL-1-84 rocker 1gang, lighting	SRL-1-84	1	piece
2CKA006220A0157	SRL-2-L-84 rocker 2g, left, lighting	SRL-2-L-84	1	piece
2CKA006220A0169	SRL-2-R-84 rocker 2g, right, lighting	SRL-2-R-84	1	piece
2CKA006220A0148	SRS-1-84 rocker 1gang, scene	SRS-1-84	1	piece
2CKA006220A0163	SRS-2-L-84 rocker 2gang, left, scene	SRS-2-L-84	1	piece
2CKA006220A0175	SRS-2-R-84 rocker 2g, right, scene	SRS-2-R-84	1	piece

Catégories

Produits basse tension → Switch Assortments → Frames

