



## Installation Guide

### ABNM A5 LOG/LIN for AB-QM, 0-10 V Proportional

Fits to AB-QM DN 10-32 / ½-1¼ inch

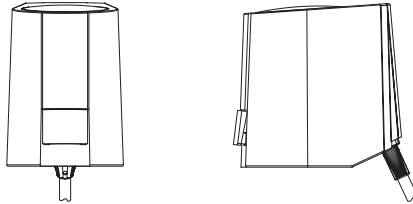


#### 1. Mounting / demounting

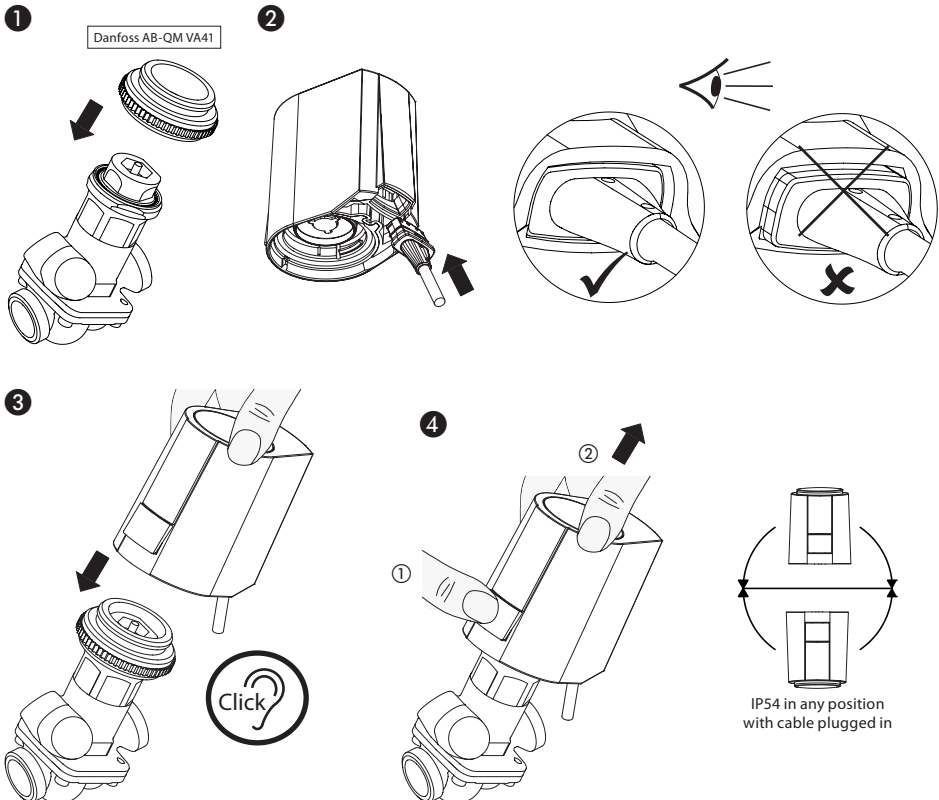


# Installation Guide ABNM A5


## 2. Electrical Connection & Dimensions

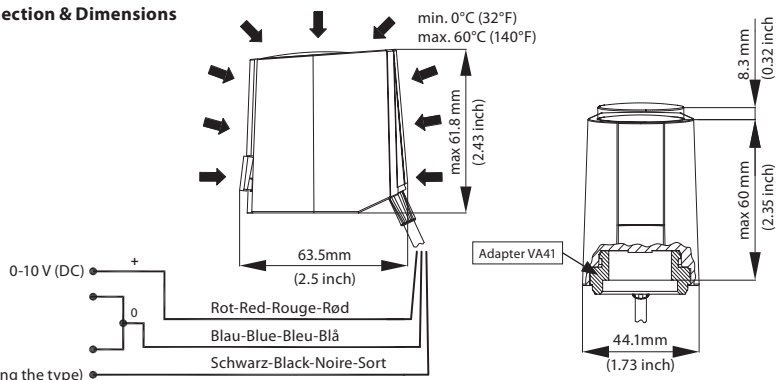


## 3. Unlock NC version (First Open Function)

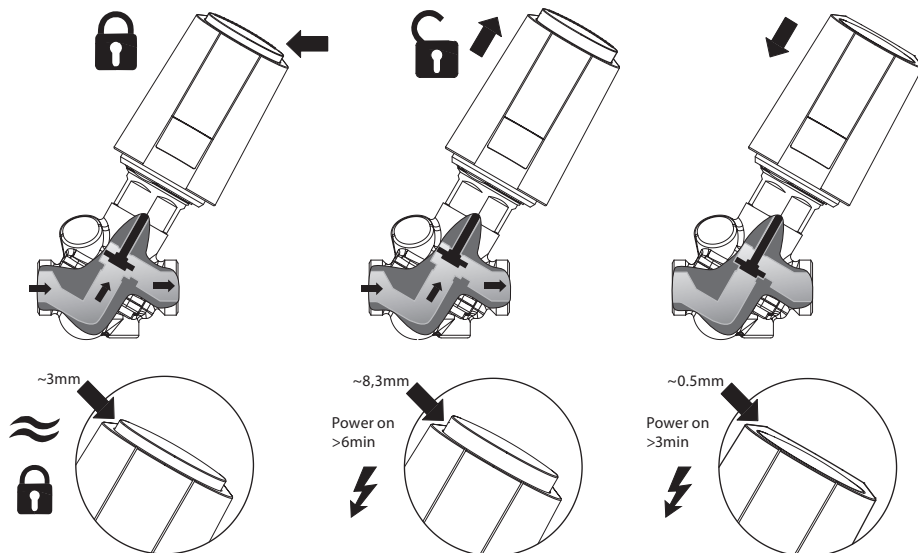

## 4. NO/NC version

 

ABNM A5 NO & AB-QM

 

ABNM A5 NC & AB-QM

## 5. Auto Calibration

