


Quick Reference

High-spec Wired Remote Controller

Model No. **CZ-RTC5B**

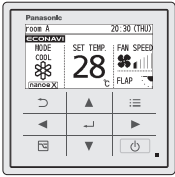

Installation Instructions Separately Attached.

E _{NG} LISH	Be sure to read the “Safety Precautions” before using. Keep them for future reference. Also, read the operating instructions supplied with the air conditioner.
F _R ANÇAIS	Veillez à lire les « Consignes de sécurité » avant l'utilisation. Conservez-le pour toute référence ultérieure. Lire également les consignes d'utilisation fournies avec l'appareil de climatisation.
E _S PAÑOL	Asegúrese de leer las “Precauciones de seguridad” antes de utilizar el aparato. Guárdelas para futuras consultas. Además, lea las instrucciones de funcionamiento suministradas con el acondicionador de aire.
D _E UTSCH	Lesen Sie vor der Inbetriebnahme die „Sicherheitshinweise“ sorgfältig durch. Bewahren Sie sie für die künftige Verwendung auf. Lesen Sie auch die Betriebsanleitung, die mit der Klimaanlage geliefert wurde.
I _T ALIANO	Assicurarsi di leggere le “Precauzioni di Sicurezza” prima dell'utilizzo. Conservarle come riferimento futuro. Si prega inoltre di leggere le istruzioni d'uso fornite con il condizionatore.
N _E DERLANDS	Lees de “Veiligheidsvoorschriften” voor gebruik. Bewaar ze om ze later te raadplegen. Lees ook de gebruikershandleiding die met de airconditioner wordt meegeleverd.
P _O RТУGUÊS	Antes de utilizar, leia as “Precauções de segurança”. Guarde-o para futuras referências. Leia também as instruções de funcionamento fornecidas com o aparelho de ar condicionado.
T _Ü RKÇE	Kullanmadan önce “Güvenlik Önlemleri” kısmını okuduğunuzdan emin olun. Klimayla birlikte sağlanan çalıştırma talimatlarını da okuyun.
P _O LSKI	W szczególności, przed rozpoczęciem korzystania z urządzenia, należy przeczytać część „Środki ostrożności”. Zachowaj ją do dalszego wykorzystania. Należy także przeczytać instrukcję obsługi dostarczoną wraz z klimatyzatorem.
P _У СКОЙ	Прежде чем приступить к эксплуатации, обязательно прочитайте раздел «Важные инструкции по безопасности». Сохраните ее для дальнейших справок. Также прочтите инструкции по эксплуатации, которые входят в комплект поставки кондиционера.
У _К РАЇНСЬКА	Обов'язково ознайомтеся з розділом «Запобіжні заходи» перед використанням. Збережіть її на майбутнє. Також прочитайте інструкції з експлуатації, що додаються до кондиціонера.

Specifications

Model No.	CZ-RTC5B
Dimensions	(H) 120 mm x (W) 120 mm x (D) 16 mm
Weight	180 g
Temperature/ Humidity range	0 °C to 40 °C / 20% to 80% (No condensation) *Indoor use only.
Power Source	DC16 V (supplied with indoor unit)
Clock	Precision ± 30 seconds/month (at normal temperature 25 °C) *Adjust periodically.
	Holding time 72 hours (When fully charged) *Approx. 8 hours are required for full charge.
Number of connectable indoor units	Indoor unit: Up to 8 units (During group-controlling)

CE Panasonic Corporation
1006 Kadoma, Kadoma City, Osaka, Japan

Panasonic Corporation
http://www.panasonic.com

© Panasonic Corporation 2018
Printed in China

Authorized representative in EU
Panasonic Testing Centre
Panasonic Marketing Europe GmbH
Winsbergring 15, 22525 Hamburg, Germany

F0318-11118
CV6233343044
ACXF55-18031

Safety Precautions

WARNING
This symbol refers to a hazard or unsafe practice which can result in severe personal injury or death.

CAUTION
This symbol refers to a hazard or unsafe practice which can result in personal injury or product or property damage.

Matters to be observed

Prohibited matters

WARNING
Do not use this appliance in a potentially explosive atmosphere.
In case of malfunction of this appliance, do not repair by yourself. Contact the sales or service dealer for repair and disposal.

CAUTIONS
In case of emergency, remove the power plug from the socket or switch off the circuit breaker or the means by which the system is isolated from the mains power.

CAUTIONS
This appliance is intended to be used by expert or trained users in shops, in light industry and on farms, or for commercial use by lay persons.
This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.

- Do not operate with wet hands.
- Do not wash with water.

NOTICE
The English text is the original instructions. Other languages are translation of the original instructions.

Part Names (Control panel)

LCD screen

Menu button
Displays the menu screen.

Return button
Returns to the previous screen.

Enter button
Fixes the selected content.

Energy saving button
Switches Energy saving/Normal operation.

Cross key buttons
Selects an item.
(◀Left / ▼Down / ▶Right / ▲Up)

Start/Stop button
Starts/Stops operation.

Operation indicator
Illuminates during operation. Blinks during alarm.

Note

- Press centre
- No glove
- No pen

datanavi

This unit supports datanavi.
Refer to the following URL for details on how to use it, etc.
<https://datanavi.ac.smartcloud.panasonic.com/global/>



Screen Display (Top screen)

Appears when ECONAVI is being set to ON. (ECONAVI settings are possible only when fitted with ECONAVI panel/ECONAVI sensor.)

datanavi outputting

Operation is locked.

Present time & day

Setting information icon (right)

Fan speed

Set temperature

Flap

Under operation of nanoe™ X

The indoor unit is stopped or slight blow operation is in process.

Item selection screen

Cursor

Internal cleaning in process

Operation guide

Operation stop screen

Operation guide

Lock screen display

[Operation lock] is functioning.

- To cancel lock
Press ◀ button for 4 seconds.

Basic Operations

1 Start operation.
Press ⏻.
(The operation indicator illuminates.)

2 Select the item to set.
Press ◀ ▶.

3 Change the setting.
Press ▲ ▼ → ◀.
(The cursor disappears.)

Note

- Operation modes that cannot be set are not displayed.
- The swing and airflow direction on the remote control is not synchronised with the flap movement.
- The flap display differs from the actual flap angle.
- Pressing ⏻ after recovery from mains power failure will resume operation with the contents before mains power failure has occurred.
- If no operation is performed for a certain period of time, the backlight turns off to save electricity. (Press any button for illumination.)
- The energy saving operation restricts the maximum current value, resulting in decreased cooling/heating performance. (If the current of outdoor units does not reach the peak due to low load operation, the current value is not restricted.)
- For models that cannot change the airflow direction, the airflow direction is not displayed.
- The fan speed and airflow direction in cooling/drying operation can be adjusted with 3 levels if controlling using one remote controller while assigning a indoor unit (e.g. ceiling-hung type) which has a 3-level adjustment of fan speed and airflow direction in cooling/drying operation as main unit, and assigning a 4-way ceiling cassette type as sub unit.

Rotation Operation

It is possible to make rotation operation settings on this unit.
Refer to the included operating instructions for details on how to use them.

Setting information icons displayed on the top screen

room A 20:30 (THU)

1 2 3 4 5 6 7 8 9 10 11

1 “Circulation” is set. (Not displayed when all the icons above are displayed.)

2 When inspection is required

3 Appears if there is a problem on ECONAVI.

4 Energy saving operation is in process.

5 Switching operation modes is prohibited. (Switching to Auto mode is also prohibited.)

6 Prevents the room temperature from increasing too much (or decreasing too much) when no one is in the room.

6 Fresh air is used for ventilation. (Only when connecting a heat exchange ventilation unit or connecting a commercially sold fan.)

7 [Weekly timer] is set.

8 [ON/OFF timer] is set.

9 Remote control operation is restricted by a central control device.

10 The indoor unit filter needs to be cleaned.

11 The engine oil needs to be replaced. (Only when using a gas heat pump air conditioner.)

Screen Display (Menu screen)

Screen name

Present time & day

Operation guide
The currently operable content is displayed.
• ◀ ▶ ▲ ▼ : Cross key buttons
• ⏻ : Enter button

Operation mode
(e.g. Cool, Heat, etc.)

Press ◀.

*Auto:
The mode is automatically switched to Cool or Heat to achieve the set temperature.

Set temperature

Press ◀. (When the cursor is not visible)

•Cool/Dry: 18 °C to 30 °C
•Heat : 16 °C to 30 °C
•Auto : 17 °C to 27 °C

Fan speed

Press ▶.

*Depending on the model, either of the displays appears.
*Auto: Cannot be selected in Fan mode.
*Depending on the model, selectable airflow directions may differ.

Flap

Press ▶ 2 times.

• ◀ ▶ : Swing
• Pressing ▲ ▼ during swing can stop the flap at your preferred position.

