



CDVI

Security to Access



MIPV

Moniteur IP pour platines IPV



EN FR NL

1] PRÉSENTATION DU PRODUIT

- Écran tactile
- Taille : 7 pouces (176 mm) de diagonale
- Rapport d'aspect : 16:9
- Résolution : 1024x600
- Profondeur de couleur : 24 bits, 16M couleurs
- Illumination : LED Edgelit
- Angle de vision : $\pm 70^\circ$ horizontal / vertical
- Audio / Vidéo
- Microphone et haut-parleur intégrés
- Mémoire RAM : 1 Go Flash : 8 Go
- Sortie relais (NO/C/NC)
- Entrée d'alarme : 8x terminaux d'entrée d'alarme
- Entrée Bell : 1x terminal d'entrée Bell
- 1 port RS485 + un port PoE
- Dimensions (L x H x P) : 200 x 132 x 17,5 mm







-10°C à +45°C

2] MISE EN ROUTE DU MONITEUR

Paramétrez le moniteur dans la langue de votre choix.
 Quittez l'application DIGIP Call



Cliquez sur "plus", "paramètre" et "langue", sélectionnez la langue que vous souhaitez.

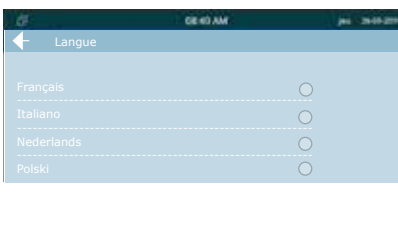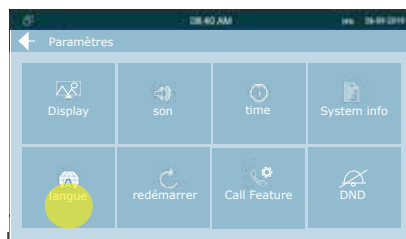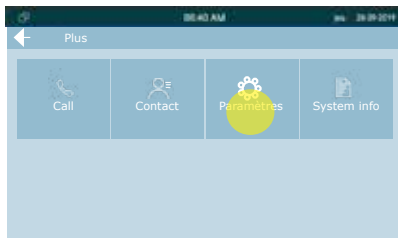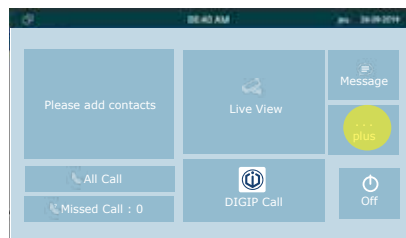

3] CONFIGURATION DU MONITEUR À LA PLATINE

3.1 Configuration en réseau câblé (configuration préconisée)

Configuration du moniteur pour la première fois

Connectez le moniteur sur le réseau LAN à l'aide d'un câble Ethernet






Cliquez sur "réglage", "réseau" et "local"

Saisissez l'adresse IP inscrite sur la platine lors du démarrage (exemple: 192.xx.xxx.x)

Validez - L'application doit afficher "Joignable"

Pour retrouver l'adresse locale de la platine, coupez et rallumez la platine.

L'adresse s'inscrit quelques secondes sur l'écran LED de la platine.

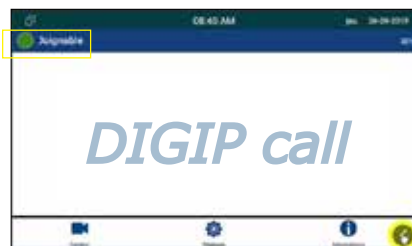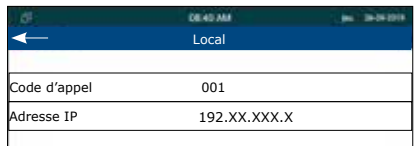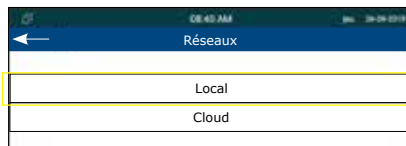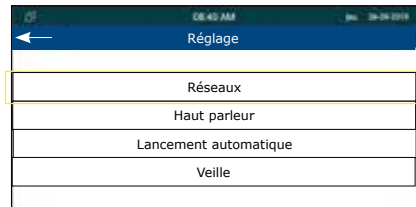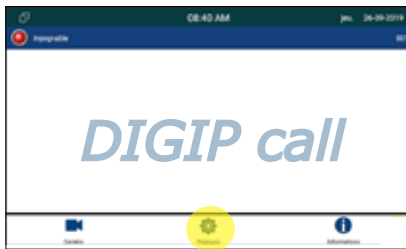





3.2 Configuration en WIFI

Configuration du moniteur pour la première fois

Quittez l'application DIGIP Call





Cliquez sur "plus", "paramètre" et sélectionnez "plus dans les paramètres" (en glissant l'écran sur la gauche)

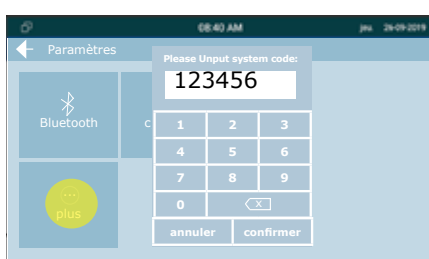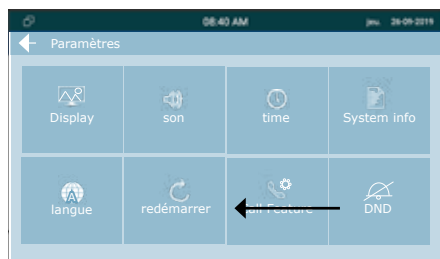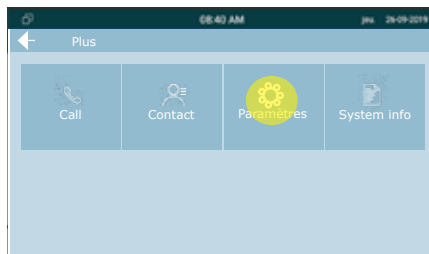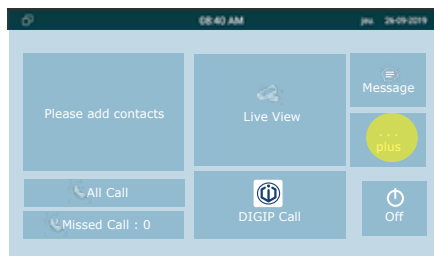

Glissez sur la gauche

Saisissez le mot de passe 123456

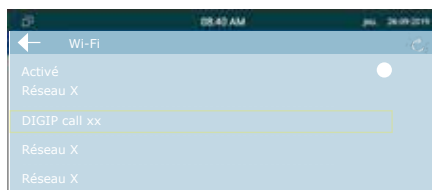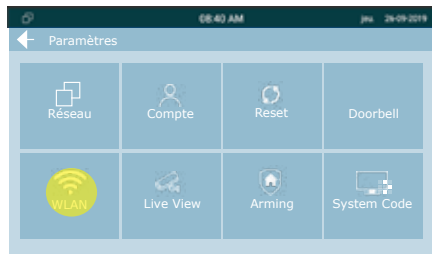





Sélectionnez la platine IPV et connectez-vous
Mot de passe digipcall12345

Revenez à l'écran principal et relancez l'App DIGIP Call

Cliquez sur "réglage", "réseau" et "local"

Saisissez l'adresse IP de la platine IPV 10.3.141.1 - Validez

L'application doit afficher "Joignable"

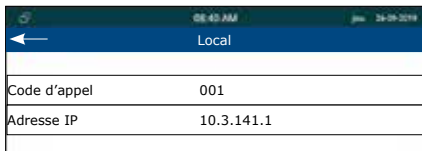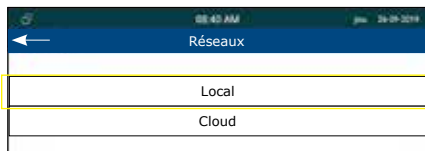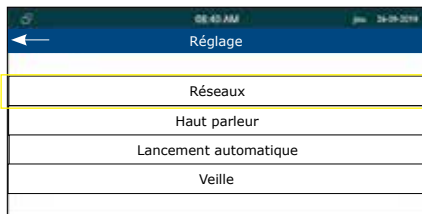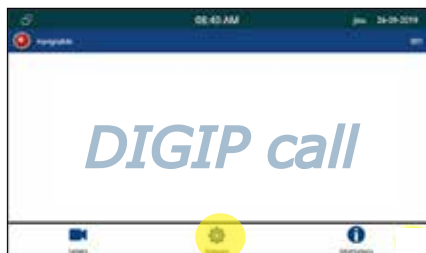

1] PRODUCT PRESENTATION

- Touch Screen
- Size : 7 inch (176 mm) distance
- Aspect Ratio : 16:9
- Resolution : 1024x600
- Color Depth : 24 bits, 16M colors
- Illumination : LED Edgelit
- Viewing Angle : $\pm 70^\circ$ horizontal / vertical
- Audio /Video
- Integrated microphone and speakers
- Memory RAM : 1 Go - **Flash**: 8 Go
- Relay Out (NO/COM/NC)
- Alarme In : 8x Alarm input terminals
- Bell In : 1x Bell input
- RS485 communication port and PoE communication port
- Dimensions (W x H x D) : 200 x 132 x 17,5 mm



-10°C à +45°C



2] MONITOR STARTING UP


Set up the monitor in the language of your choice.

Exit DIGIP Call app.



Press "more", "parameter" et "language", select your language

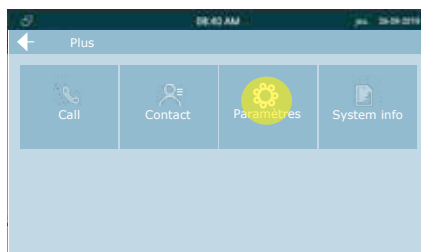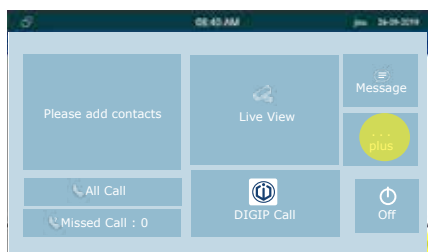

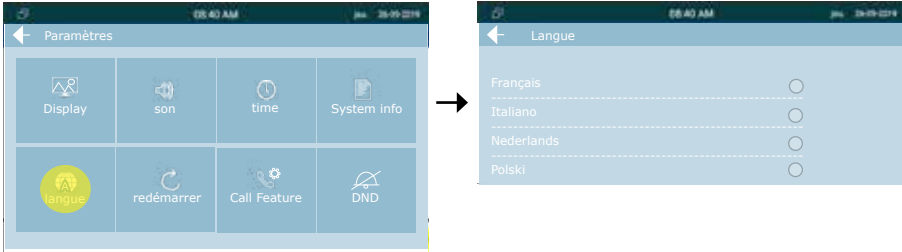

3] CONFIGURING : MONITOR/DOOR STATION

3.1 Wired network configuration (recommended configuration)



Configuring the monitor for the first time

Connect the monitor to the LAN using an Ethernet cable.

Press "set", "network" and "local".

Enter the IP address written on the board at startup (example: 192.xx.xxx.x) Confirm
The application should display "Reachable".


To find the local address of the door station, switch off and on the door station.
The address is displayed on the LED display of the door station for a few seconds.

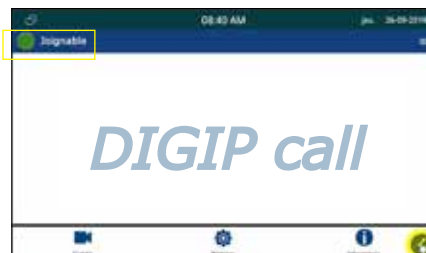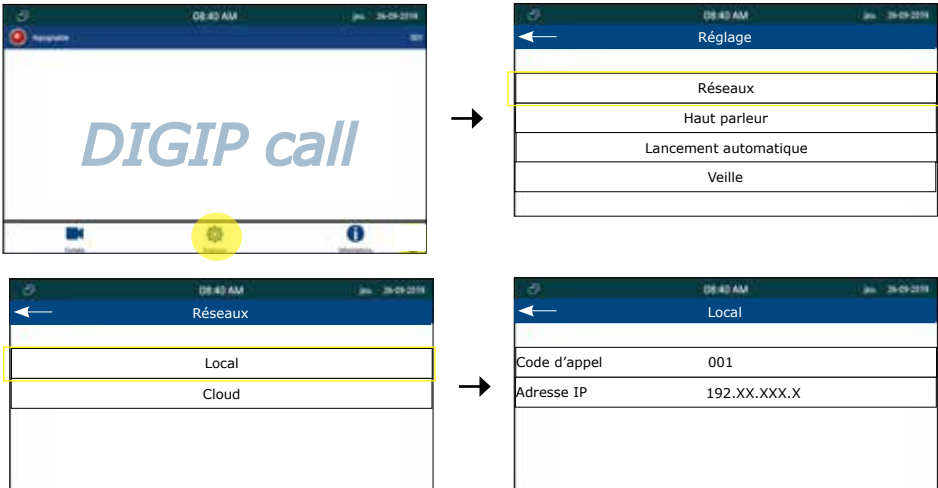





3.2 WIFI Configuration

Configuring the monitor for the first time

Exit DIGIP Call app.


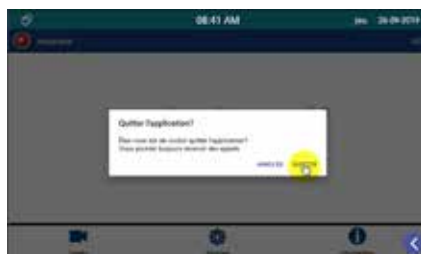


Press on "more", "parameter" and press "more in the parameter" (dragging the screen to the left)

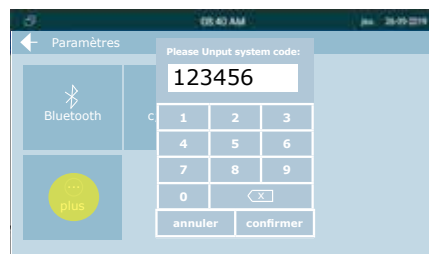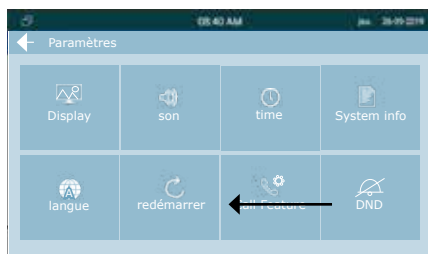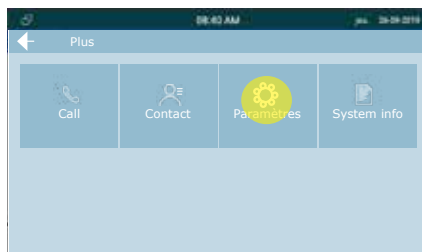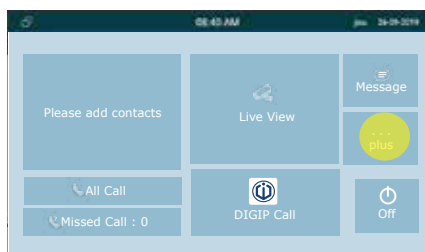

Slide to the left

Enter the password 123456

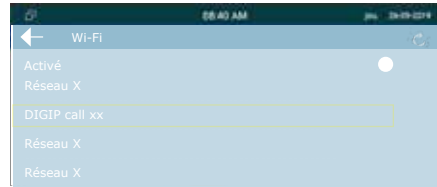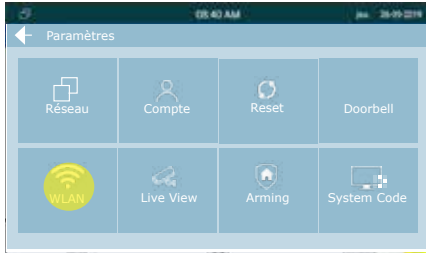






Select the IPV Door entry and login
 Password digipcall12345

Return to the main screen and restart the DIGIP Call App

Press "set", "network" and "local".

Enter the IP address of the door station IPV 10.3.141.1 - Confirm

The application should display "Reachable".

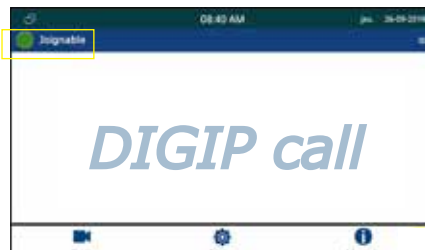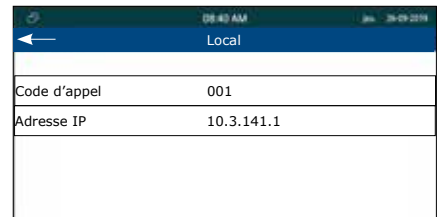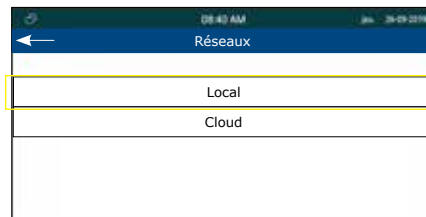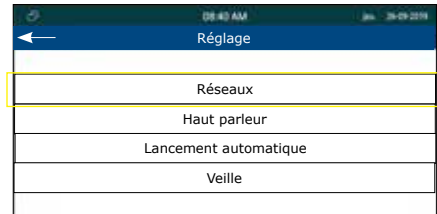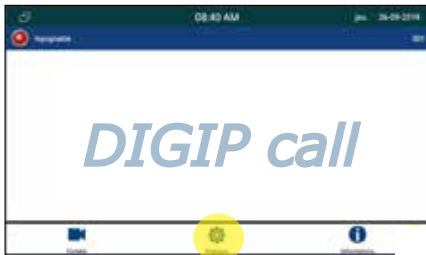





CDVI Group

FRANCE (Headquarters)
Phone: +33 (0) 1 48 91 01 02
.....

CDVI FRANCE + EXPORT

+33 (0) 1 48 91 01 02
www.cdvi.com

CDVI AMERICAS [CANADA - USA]

+1 (450) 682 7945
www.cdvi.ca

CDVI BENELUX [BELGIUM - NETHERLANDS - LUXEMBOURG]

+32 (0) 56 73 93 00
www.cdviбенelux.com

CDVI TAIWAN

+886 (0) 42471 2188
www.cdvichina.cn

CDVI SUISSE

+41 (0) 21 882 18 41
www.cdvi.ch

CDVI CHINA

+86 (0) 10 84606132/82 - www.cdvichina.cn

CDVI IBÉRICA [SPAIN - PORTUGAL]

+34 (0) 935 390 966
www.cdviiberica.com

CDVI ITALIA

+39 (0) 321 90 573
www.cdvi.it

CDVI MAROC

+212 (0) 5 22 48 09 40
www.cdvi.ma

CDVI NORDICS [SWEDEN - DENMARK - NORWAY - FINLAND]

+46 (0) 31 760 19 30
www.cdvi.se

CDVI UK [UNITED KINGDOM - IRELAND]

+44 (0) 1628 531300
www.cdvi.co.uk

CDVI POLSKA

+48 (0) 12 659 23 44
www.cdvi.com.pl

All the information contained within this document (pictures, drawings, features, specifications and dimensions) could be perceptibly different and can be changed without prior notice.