

PRODUCT-DETAILS

1722-184K-500

1722-184K-500 Cover Frame 2gang(s) studio white Horizontal mounting - future linear



Informations générales

Extension du type de produit	1722-184K-500
Code de produit	2CKA001754A4499
EAN	4011395174531
Description courte	1722-184K-500 Cover Frame 2gang(s) studio white Horizontal mounting - future linear
Description longue	With small corner radii for trunking systems.

Technique

Number of Gangs	2
Design Range	future linear 63x63
Type de montage	Flush Mounted
Type of Fastening	Clamp
Sens de montage	Horizontal
Finition de surface	Untreated Glossy
Matériau	Thermoplastic
Label Space Provided	No
RAL Number	RAL 9016 - Blanc signalisation
Couleur	studio white
Poids de la batterie	0 g

Environnement

Indice de protection	IP20
Statut RoHS	Following EU Directive 2011/65/EU and Amendment 2015/863 July 22, 2019
Informations RoHS	2CKA200000E2826
REACH Declaration	2CKA309999E9999

Dimensions

Produit Largeur Net	151 mm
Produit Hauteur Net	12 mm
Produit Longueur Net	80 mm
Poids net	34 g

Commande

Quantité minimum	1 pièce
Emballage Niveau 1 Unités	carton 10 pièce
Emballage Niveau 1 Poids	0.415 kg
Code douanier	85389099
E-Number (Sweden)	1815033
Pays d'origine	Germany (DE)

Certificats et Déclarations (Numéro de document)

Déclaration de Conformité - CE	2CKA200000E2826
--------------------------------	-----------------

Classifications

ETIM 8	EC000007 - Cover frame for domestic switching devices
ETIM 9	EC000007 - Cover frame for domestic switching devices
Catégorie DEEE	Product Not in WEEE Scope
CN8	8538 90 99
eClass	V11.0 : 27144001

Accessories

Identifiant	Description	Type	Quantity	Unit Of Measure
2CKA001731A1916	1720-84 Rocker Switch Pull cord studio white - 63x63	1720-84	1	piece
2CKA001710A3808	1740 DR/03-84 Cover Plate Level switch Turn button studio white - 63x63	1740 DR/03-84	1	piece
2CKA001710A3512	1740 DRL-84-503 Cover Plate Level switch Turn button Symbol "3-level switch" studio white - 63x63	1740 DRL-84-503	1	piece
2CKA001710A3172	1740-84 Cover Plate Venetian blind Turn button studio white - 63x63	1740-84	1	piece
2CKA001710A3161	1742-84 Cover Plate Blind cap 1 gang(s) with Mounting plate studio white - 63x63	1742-84	1	piece

2CKA001710A3991	1742-84-500 Inserts with Cover Plate Blind cap 1 gang(s) 0 pole studio white - 63x63	1742-84-500	1	piece
2CKA001724A4368	1743/10-04-84 Cover Plate SAT 1 gang(s) 4 gang(s) studio white - 63x63	1743/10-04-84	1	piece
2CKA001724A4377	1743-04-84 Cover Plate TV / Radio / 2x SAT 1 gang(s) 4 gang(s) studio white - 63x63	1743-04-84	1	piece
2CKA001724A4332	1743-84-500 Cover Plates SAT 1 gang(s) 3 gang(s) studio white - 63x63	1743-84-500	1	piece
2CKA001710A3173	1745-84 Cover Plate telephone connector boxes (VDo) 1 gang(s) studio white - 63x63	1745-84	1	piece
2CKA001710A3993	1746/10-84-500 Cover Plates Telecommunication inserts 0 gang(s) studio white - 63x63	1746/10-84-500	1	piece
2CKA001710A3167	1746-84 Intermediate Ring Telecommunication inserts 50 x 50 mm 1 gang(s) with Hinged Lid studio white - 63x63	1746-84	1	piece
2CKA001710A4096	1747 BSI-84 Intermediate Ring Cover plates Busch-Balance® SI studio white - 63x63	1747 BSI-84	1	piece
2CKA001710A3863	1747 SI-84 Cover Plates studio white - 63x63	1747 SI-84	1	piece
2CKA001710A3861	1747-84 Intermediate Ring Cover plates Busch-Duro 2000® SI and Reflex SI studio white - 63x63	1747-84	1	piece
2CKA001710A3656	1748-84 Cover Plate Data connection 2 gang(s) studio white - 63x63	1748-84	1	piece
2CKA001710A3163	1749-84 Cover Plate Cable outlet 1 gang(s) 0 gang(s) studio white - 63x63	1749-84	1	piece
2CKA001710A3166	1750-84 Cover Plate BNC/TNC 2 gang(s) studio white - 63x63	1750-84	1	piece
2CKA001723A0240	1751-84 Cover Plate Loudspeaker 2 gang(s) studio white - 63x63	1751-84	1	piece
2CKA001710A3175	1755 SL/PZ-84-101 Cover Plate Venetian blind Key studio white - 63x63	1755 SL/PZ-84-101	1	piece
2CKA001753A0092	1756-84 Cover Plate Info light studio white - 63x63	1756-84	1	piece
2CKA001724A2761	1758-84 Cover Plate For data connection housing 2 gang(s) studio white - 63x63	1758-84	1	piece
2CKA001710A4106	1762-84-506 Cover Plates TDO 1 gang(s) 1 gang(s) studio white - 63x63	1762-84-506	1	piece
2CKA001731A1877	1764 NLI-84 Rocker Switch/push button Single push button with Pilot lamp studio white - 63x63	1764 NLI-84	1	piece
2CKA001710A3992	1766-84-500 Cover Plates TAE 1 gang(s) 0 gang(s) studio white - 63x63	1766-84-500	1	piece
2CKA001753A0258	1770-84-103 Cover Plate Time switch Toggle studio white - 63x63	1770-84-103	1	piece
2CKA001753A0301	1771-84-103 Cover Plate Time switch Toggle studio white - 63x63	1771-84-103	1	piece
2CKA001751A3099	1785 JA/02-84 Rocker Venetian blind Two-part rocker Symbol "arrows" studio white	1785 JA/02-84	1	piece
2CKA001751A3088	1785 JA-84-500 Cover Plates Venetian blind Two-part rocker Symbol "arrows" studio white - 63x63	1785 JA-84-500	1	piece
2CKA001751A3128	1785 K-84-500 Cover Plates Switch/push button Two-part rocker None studio white - 63x63	1785 K-84-500	1	piece
2CKA001751A2992	1785/11-84 Rocker Switch/push button Two-part rocker studio white - 63x63	1785/11-84	1	piece
2CKA001751A3076	1785-84-500 Cover Plates Switch/push button Two-part rocker Without imprint studio white - 63x63	1785-84-500	1	piece
2CKA001751A3098	1786 JA/02-84 Rocker Venetian blind Single rocker studio white	1786 JA/02-84	1	piece
2CKA001751A2998	1786/11-84 Rocker Switch/push button Single rocker studio white - 63x63	1786/11-84	1	piece
2CKA001751A3074	1786-84-500 Cover Plates Switch/push button Single rocker Without imprint studio white - 63x63	1786-84-500	1	piece
2CKA001751A2750	1788-84 Rocker Switch/push button Single rocker studio white - 63x63	1788-84	1	piece

2CKA001751A2751	1789 H-84 Rocker Switch/push button Single rocker Heizung studio white - 63x63	1789 H-84	1	piece
2CKA001751A2754	1789 KI-84 Rocker Switch/push button Single rocker Symbol "bell" studio white - 63x63	1789 KI-84	1	piece
2CKA001751A3084	1789 LI-84-500 Cover Plates Switch/push button Single rocker Symbol "light" studio white - 63x63	1789 LI-84-500	1	piece
2CKA001751A3151	1789 N-84-500 Cover Plates Switch/push button Single rocker Without imprint studio white - 63x63	1789 N-84-500	1	piece
2CKA001751A3161	1789 ST-84-500 Cover Plates Switch/push button Single rocker Various symbols studio white - 63x63	1789 ST-84-500	1	piece
2CKA001751A2755	1789 TR-84 Rocker Switch/push button Single rocker studio white - 63x63	1789 TR-84	1	piece
2CKA001751A3091	1789-84-500 Cover Plates Switch/push button Single rocker Without imprint studio white - 63x63	1789-84-500	1	piece
2CKA001710A4113	1790-592-84 Cover Plate Medical alarm studio white - 63x63	1790-592-84	1	piece
2CKA001710A3698	1794 TA-84 Cover Plate Thermostat Turn button studio white - 63x63	1794 TA-84	1	piece
2CKA001710A3544	1794-84 Cover Plate Thermostat studio white - 63x63	1794-84	1	piece
2CKA001710A4017	1795 HK-84 Cover Plate Thermostat Turn button studio white - 63x63	1795 HK-84	1	piece
2CKA001710A4049	1795 HKEA-84 Cover Plate Thermostat Turn button 1 switchover studio white - 63x63	1795 HKEA-84	1	piece
2CKA001710A3725	1795 TA-84 Cover Plate Thermostat Turn button studio white - 63x63	1795 TA-84	1	piece
2CKA001710A3569	1795-84 Cover Plate Thermostat Turn button studio white - 63x63	1795-84	1	piece
2CKA001753A0311	1796-84 Cover Plate Pull cord studio white - 63x63	1796-84	1	piece
2CKA001710A3990	1800-84-500 Cover Plates Modular Jack 1 gang (s) 2 gang(s) studio white - 63x63	1800-84-500	1	piece
2CKA001710A1551	1803-02-84-500 Cover Plates UAE/IAE (ISDN) 1 gang(s) 2 gang(s) studio white - 63x63	1803-02-84-500	1	piece
2CKA001710A1550	1803-84-500 Cover Plates UAE/IAE (ISDN) 1 gang(s) 1 gang(s) studio white - 63x63	1803-84-500	1	piece
2CKA002013A5407	20 EUAB-84 Socket insert Busch-Object socket outlet Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	20 EUAB-84	1	piece
2CKA002011A6207	20 EUC-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUC-84-500	1	piece
2CKA002013A5418	20 EUCBDR-84 Socket insert Busch-Service-Socket Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	20 EUCBDR-84	1	piece
2CKA002013A5286	20 EUCBL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter LED/Green 1gang(s) studio white - 63x63	20 EUCBL-84	1	piece
2CKA002013A5294	20 EUCBLI-84 Socket insert Protective Contact (SCHUKO) Safety Shutter LED/White 1gang(s) studio white - 63x63	20 EUCBLI-84	1	piece
2CKA002013A5268	20 EUCKS/DV-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	20 EUCKS/DV-84	1	piece
2CKA002013A5372	20 EUCKS-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUCKS-84-500	1	piece
2CKA002013A5441	20 EUCRB-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUCRB-84-500	1	piece
2CKA002018A1509	20 EUK-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) with Hinged Lid studio white - 63x63	20 EUK-84-500	1	piece

2CKA002018A1520	20 EUKB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKB-84	1	piece
2CKA002018A1529	20 EUKBR-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKBR-84	1	piece
2CKA002018A1540	20 EUKNB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNB-84	1	piece
2CKA002018A1551	20 EUKNBL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNBL-84	1	piece
2CKA002018A1563	20 EUKNBSL-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNBSL-84	1	piece
2CKA002018A1564	20 EUKNBSL-84-101 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) with Hinged Lid studio white - 63x63	20 EUKNBSL-84-101	1	piece
2CKA002011A6209	20 EUN-84-500 Inserts with Cover Plate Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	20 EUN-84-500	1	piece
2CKA002017A0786	20 MUC-84-500 Socket insert 1gang(s) studio white - 63x63	20 MUC-84-500	1	piece
2CKA002017A0807	20 MUCKS-84-500 Inserts with Cover Plate 1gang(s) studio white - 63x63	20 MUCKS-84-500	1	piece
2CKA001751A3170	2029 UC-84 Bell push-switch DND / MUR insert Bell Single push button studio white - 63x63	2029 UC-84	1	piece
2CKA002495A0086	2095 UC-84 Socket insert Equipotential compensation studio white - 63x63	2095 UC-84	1	piece
2CKA002190A0215	2190 EUC-84 Inserts with Cover Plate 1gang(s) studio white	2190 EUC-84	1	piece
2CKA002013A5477	23 EUCB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	23 EUCB-84	1	piece
2CKA002013A5451	2300 EUCB-84 Socket insert Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - 63x63	2300 EUCB-84	1	piece
2CKA002113A0511	2300 UCRKS-84-503 Inserts with Cover Plate 1gang(s) studio white - 63x63	2300 UCRKS-84-503	1	piece
2CKA002011A3833	2310 EUGL/VA-84-11 Socket insert Busch-Protector® Protective Contact (SCHUKO) 1gang(s) studio white - 63x63	2310 EUGL/VA-84-11	1	piece
2CKA002099A0214	2399 UCKS-84 Socket insert Safety Shutter 1gang(s) studio white - 63x63	2399 UCKS-84	1	piece
2CKA002099A0192	2399 UCKS-84-505 Inserts with Cover Plate 1gang(s) studio white - 63x63	2399 UCKS-84-505	1	piece
2CKA001719A0220	2518-WD-84 Intermediate Ring with Hinged Lid 1 gang(s) studio white - 63x63	2518-WD-84	1	piece
2CKA001751A3180	2520 KI-84-500 Cover Plates Switch/push button Single rocker studio white - 63x63	2520 KI-84-500	1	piece
2CKA001751A3199	2520 TR-84 Rocker Switch/push button Single rocker studio white - 63x63	2520 TR-84	1	piece
2CKA001724A4256	2533-84 Cover Plate Bore hole 1 gang(s) studio white - 63x63	2533-84	1	piece
2CKA001710A3646	2542 DR/01-84 Cover Plate Level switch Turn button Symbol "0-1-2-3" studio white - 63x63	2542 DR/01-84	1	piece
2CKA001710A3651	2542 DR/02-84 Cover Plate Level switch Turn button Symbol "1-2-3" studio white - 63x63	2542 DR/02-84	1	piece
2CKA001724A4388	2548-022 AR-84 Cover Plate Doctor Blue 1 button(s) studio white - 63x63	2548-022 AR-84	1	piece
2CKA001724A4402	2553-84 Cover Plate XLR 1 gang(s) 1 gang(s) studio white - 63x63	2553-84	1	piece
2CKA001753A0394	2561-02-84 Cover Plate Modular Jack 1 gang(s) 2 gang(s) studio white - 63x63	2561-02-84	1	piece
2CKA001753A0403	2561-84 Cover Plate Modular Jack 1 gang(s) 1 gang(s) studio white - 63x63	2561-84	1	piece

2CKA003116A0662	3120 EUCB-84 Socket insert FI-Schukomat Protective Contact (SCHUKO) Safety Shutter 1gang(s) studio white - solo	3120 EUCB-84	1	piece
2CKA003117A0006	3151 UC-84 RCD - Insert Buschmat 30 mA studio white - 63x63	3151 UC-84	1	piece
2CKA006115A0486	6108/61-84-500 Coverplate f. CE	6108/61-84- 500	1	piece
2CKA006155A0063	6109/03-84-500 Coverplate f. RTC	6109/03-84- 500	1	piece
2CKA006132A0379	6122/10-84-500 BW standard	6122/10-84- 500	1	piece
2CKA006115A0183	6125/01-84-500 Control element 1g w. BAU	6125/01-84- 500	1	piece
2CKA006115A0219	6125/02-84-500 Control element 1/2gang	6125/02-84- 500	1	piece
2CKA006116A0174	6126/01-84-500 Control element 2g w. BAU	6126/01-84- 500	1	piece
2CKA006116A0209	6126/02-84-500 Control element 2/4gang	6126/02-84- 500	1	piece
2CKA006117A0200	6127/01-84-500 Control element 4g w. BAU	6127/01-84- 500	1	piece
2CKA006117A0235	6127/02-84-500 Control element 4/8gang	6127/02-84- 500	1	piece
2CKA006134A0334	6128/28-84-500 RTC Control element 2/4g	6128/28-84- 500	1	piece
2CKA006135A0146	6129/01-84-500 Control element 3/6g w. IR	6129/01-84- 500	1	piece
2CKA006430A0400	6430-84-102-500 Cover Plates Venetian blind Symbol "arrows" studio white - 63x63	6430-84-102- 500	1	piece
2CKA006430A0306	6435-84 Cover Plate Time switch studio white - 63x63	6435-84	1	piece
2CKA006470A0004	6476-84 Cover Plate Proximity switch studio white - 63x63	6476-84	1	piece
2CKA006400A0059	6477-84 Cover Plate PowerDock 1 gang(s) studio white	6477-84	1	piece
2CKA006400A0047	6480/11-84-500 Complete Devices studio white	6480/11-84- 500	1	piece
2CKA006400A0045	6480-84-500 Complete Devices studio white - future linear	6480-84-500	1	piece
2CKA006599A3009	6540-84-102-500 Cover Plates Dimmer studio white - 63x63	6540-84-102- 500	1	piece
2CKA006599A2835	6541-84 Cover Plate Cooling Central cover plate studio white - 63x63	6541-84	1	piece
2CKA006599A3010	6543-84-101-500 Cover Plates Switch/dimmer Single push button Without imprint studio white - 63x63	6543-84-101- 500	1	piece
2CKA006599A2908	6545-84 Control Element Dimmer Two-part button with Neon lamp studio white - 63x63	6545-84	1	piece
2CKA006710A0011	6716 UJ-84-500 Complete Devices studio white - future linear	6716 UJ-84- 500	1	piece
2CKA006730A0038	6731-84-500 Cover Plates studio white - 63x63	6731-84-500	1	piece
2CKA006730A0039	6732-84-500 Cover Plates studio white - 63x63	6732-84-500	1	piece
2CKA006730A0040	6733-84-500 Wall sensor studio white - 63x63	6733-84-500	1	piece
2CKA006730A0136	6736 FoH-84 Control Element Switch/dimmer Two-part button studio white	6736 FoH-84	1	piece
2CKA006800A2834	6815-84-101-500 Cover Plates studio white	6815-84-101- 500	1	piece
2CKA008200A0081	8253-84 Cover Plate Loudspeaker studio white - 63x63	8253-84	1	piece
2CKA006220A0244	CP-FCC-84 C-plate Fan Coil	CP-FCC-84	1	piece
2CKA006220A0181	CP-RTC-84 C-plate RT sensor unit	CP-RTC-84	1	piece
2CKA006220A0214	MD-F-1.0.1-84 Movement detector	MD-F-1.0.1-84	1	piece

2CKA006220A0217	MSA-F-1.1.1-84 Mov. detector/actuator 1g	MSA-F-1.1.1-84	1	piece
2CKA006220A0086	MSA-F-1.1.1-84-WL WL-Mov. detector/act. 1g	MSA-F-1.1.1-84-WL	1	piece
2CKA006220A0139	SR-1-84 rocker 1gang	SR-1-84	1	piece
2CKA006220A0154	SR-2-84 rocker 2gang	SR-2-84	1	piece
2CKA006220A0145	SRB-1-84 rocker 1gang, blinds	SRB-1-84	1	piece
2CKA006220A0160	SRB-2-84 rocker 2g, blinds	SRB-2-84	1	piece
2CKA006220A0151	SRD-1-84 rocker 1gang, dimming	SRD-1-84	1	piece
2CKA006220A0166	SRD-2-L-84 rocker 2g, left, dimming	SRD-2-L-84	1	piece
2CKA006220A0260	SRD-2-R-84 rocker 2g, right, dimming	SRD-2-R-84	1	piece
2CKA006220A0142	SRL-1-84 rocker 1gang, lighting	SRL-1-84	1	piece
2CKA006220A0157	SRL-2-L-84 rocker 2g, left, lighting	SRL-2-L-84	1	piece
2CKA006220A0169	SRL-2-R-84 rocker 2g, right, lighting	SRL-2-R-84	1	piece
2CKA006220A0148	SRS-1-84 rocker 1gang, scene	SRS-1-84	1	piece
2CKA006220A0163	SRS-2-L-84 rocker 2gang, left, scene	SRS-2-L-84	1	piece
2CKA006220A0175	SRS-2-R-84 rocker 2g, right, scene	SRS-2-R-84	1	piece

Catégories

Produits basse tension → Switch Assortments → Frames

