


KNX building management system

KNX roller shut- ter / blind actua- tor

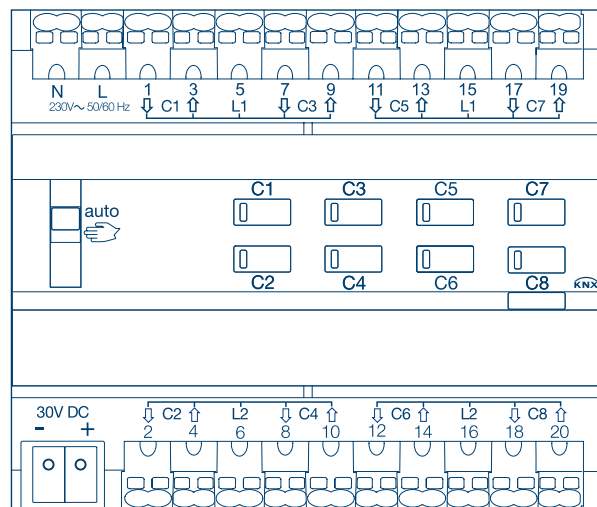

KNX Secure 8-gang roller shutter / blind actua-
tor

TYAS628C

UK
CA

:hager

Table of contents

1	Introduction.....	4
2	Safety instructions.....	6
3	Scope of delivery.....	7
4	Design and layout of the device.....	8
5	Function.....	9
5.1	easylink commissioning.....	9
6	Operation.....	11
7	Information for qualified electricians.....	13
7.1	Installation and electrical connection.....	13
7.2	Commissioning.....	16
7.2.1	Commissioning the device.....	18
7.3	Dismantling.....	18
8	Appendix.....	21
8.1	Technical data.....	21
8.2	Troubleshooting.....	21
8.3	Accessories.....	22
8.4	Regulatory Compliance Australia.....	22
8.5	Disposal.....	22
8.6	Warranty.....	22

1 Introduction

These instructions describe the safe and correct installation and commissioning of the KNX Secure roller shutter / blind actuator. These instructions are provided as information in addition to the product.

Symbols used

☑ Requirement. This requirement must have been met before continuing with the next assembly step.

- Single-step instruction or any sequence.
- ① Multi-step instruction. Sequence must be maintained.
- List
- Reference to additional documents/information




















	Scope of delivery		Installation by a qualified electrician		For further information on configuring the device, refer to the application manual
	KNX-certified		Supports KNX Data Secure		
	Installation terminal with actuation opening		Compatibility with KNX S-mode (ETS)		Compatibility with Hager Easytool
	Suitable for use in China		Suitable for use in Morocco		Suitable for use in Australia and New Zealand
	Suitable for use throughout Europe and Switzerland		Manufacturer's information is in accordance with § 18 Para. 4 of the German Electrical and Electronic Equipment Act		Suitable for use in England, Wales and Scotland

Table 1: Symbols used

Symbol	Warning word	Consequence of non-observance
	Danger	Leads to serious injuries or death.
	Warning	Can lead to serious injuries or death.
	Caution	Can lead to minor injuries.
	Caution	Can lead to device damage.
	Note	Can lead to physical damage.

Symbol	Description
	Warning against electric shock.

Symbol	Description
	Warning against damage from electricity.
	Warning against damage from mechanical stress.
	Warning against damage from overheating.

	<p>Electronic devices may only be assembled, installed and configured by an electrically trained and certified specialist in accordance with the relevant installation standards of the country. The accident prevention regulations valid in the appropriate countries must be complied with.</p>
---	--

In addition, these instructions are intended for system administrators and electrically trained specialists.

2 Safety instructions

Electrical devices must only be installed and assembled by a qualified electrician in accordance with the relevant installation standards, guidelines, regulations, directives, safety and accident prevention directives of the country.

Hazard due to electric shock. Disconnect before working on the device or load. Take into account all circuit breakers that supply dangerous voltages to the device or load.

Failure to comply with these installation instructions may result in damage to the device, fire or other hazards.

Danger due to electric shock. The device is not suitable for safe disconnection or isolation of the mains supply.

Danger due to electric shock on the SELV/PELV installation. Not suitable for switching SELV/PELV voltages.

Connect one motor per output only. If several motors are connected, motors or device might be destroyed.

Use drives with mechanical or electrical final position switches only. Check final position switches for correct adjustment. Comply with motor manufacturer's data. The device may get damaged.

Do not connect any three-phase motors. The device may get damaged.

Observe the motor manufacturer's data regarding change-over time and max. duty cycle.

3 Scope of delivery

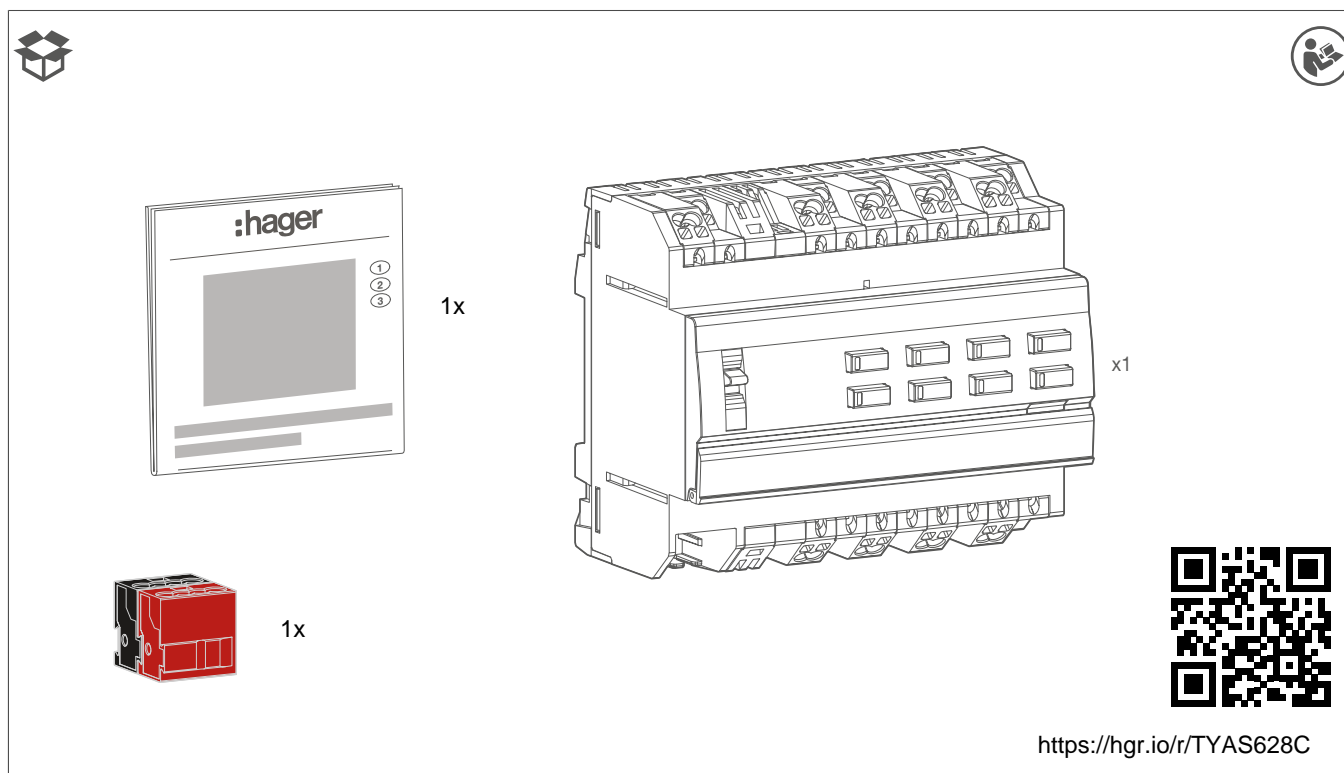


Fig. 1: Scope of delivery TYAS628C

4 Design and layout of the device

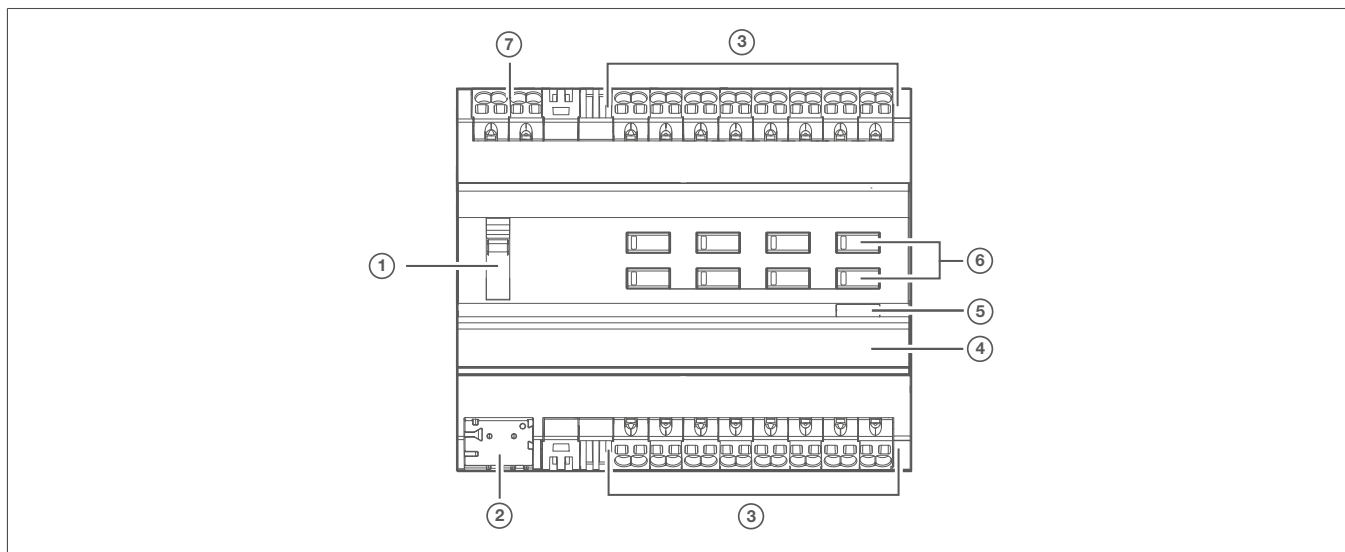



Fig. 2: Design and layout of the device

- ① Slide switch **auto** / 
- ② KNX bus connection terminal
- ③ Connections of loads
- ④ Labelling field with cover
- ⑤ Illuminated programming button
- ⑥ Operation button for manual mode for each output with status LED
- ⑦ Connection, 230 V ~ supply voltage

5 Function

System information

Dieses Gerät ist ein Produkt des KNX-Systems und entspricht den KNX-Richtlinien. Detaillierte Fachkenntnisse durch KNX-Schulungen werden zum Verständnis vorausgesetzt.

Das Gerät ist KNX Data Secure fähig. KNX Data Secure kann im ETS-Projekt konfiguriert werden und bietet Schutz vor Manipulation in der Gebäudeautomation. Detaillierte Kenntnisse zu diesem Thema werden vorausgesetzt. Für die Inbetriebnahme eines KNX-Secure-Gerätes ist ein Gerätezertifikat (FDSK) erforderlich, welches am Gerät angebracht ist (QR-Code Aufkleber). Während der Montage ist das Gerätezertifikat vom Gerät zu entfernen und sicher aufzubewahren.

Planung, Installation und Inbetriebnahme des Gerätes erfolgen mithilfe einer KNX-zertifizierten Software.

Systemlink commissioning

The function of the device is software-dependent. The software is to be obtained from the product database. You can find the latest version of the product database, technical descriptions as well as conversion and additional support programmes from our website.

5.1 easylink commissioning

The function of the device is configuration-dependent. The configuration can also be performed using devices developed specially for simple setting and commissioning.

This type of configuration is only possible with devices compatible with the easylink system. easylink stands for easy, visually supported commissioning. Preconfigured standard functions are assigned to the inputs/outputs by means of a service module.

Functional description

The 8gang blind actuator receives telegrams from sensors or other controls via the KNX and switches electrically operated blinds, roller shutters, awnings or similar building fittings that are suitable for mains voltage.

The operation buttons for manual mode on the front of the device can be used to switch the outputs during KNX operation or in the unprogrammed state. This enables quick function testing of the connected loads - during work on a construction site.

Correct use

- Switching electrically operated motors of 230 V AC for blinds, shutters, awnings and similar hangings
- Installation on DIN rail according to IEC 60715

Product characteristics

- Compatible with KNX Data Secure products
- Manual activation of the outputs on the device possible, building site operation
- Status indication of the outputs on the device
- Scene function
- Forced position by higher-level controller
- Connection of various external conductors possible
- Suitable for AC motors 110...230 V

Function

- Position can be started directly
- Slat position directly controllable
- Feedback of operating state, shutter position and lamella adjustment
- Forced position by higher-level controller
- Safety function: 3 independent wind alarms, rain alarm, frost alarm
- Sunshade function with automatic heating and cooling
- Blocking function
- Scene function
- 3 Alarms

6 Operation

Switching manual mode on/off



With the 8gang variants, control of the outputs is possible even without bus voltage when mains voltage is connected e.g. for operation on construction sites.

☑ The 230 V ~ power supply or bus power supply is present.

- Move (1) switch to position.

Manual mode is switched on, the outputs can be controlled independently of each other via the operation buttons (6).



During manual mode, the controller is deactivated via the KNX bus.

systemlink commissioning:

Depending on the programming, manual mode is activated permanently or for a time period configured using the application software. If manual mode is disabled via the application software, no activation takes place.

Or:

- Move the switch (1) to position **auto**.

Manual operation is switched off. Operation takes place solely via the KNX bus. The output assumes the position predefined by the bus controller. The switching status is displayed by the status LED of the operation button (6).

Operating outputs in manual mode

Operation takes place per output by briefly pressing the operation button repeatedly (Bild 2/6) (Tab. 2).



Caution

Risk of destruction due to simultaneous pressing of the buttons for UP and DOWN if a motor is connected when the motor is in an unprogrammed state!

Motors, hangings and the device may be destroyed!

- Only ever press one button in manual mode when working with unprogrammed devices.

Condition (Bild 2/6)

Behaviour when button is pressed (Bild 2/6)

Roller shutter/blind operation

Output is in idle state, status LED of the button is off.

Long button press:

Movement operation starts. Status LED of the button lights up.

Output active, status LED of the button lights up.

Short button press:

Movement operation stops, LED goes out.

Table 2: Manual operation



Note

If the roller shutter/blind is in the final position, the button opposite must be pressed in order to move the shutter/blind.

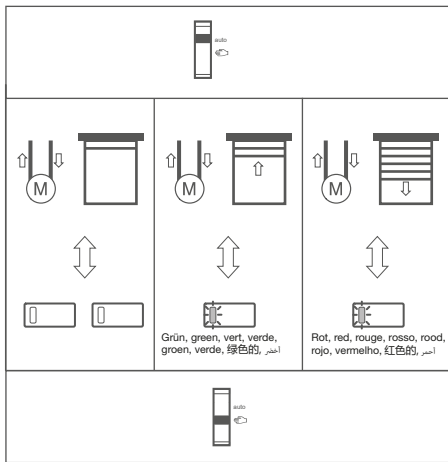


Fig. 3: Operating the device

7 Information for qualified electricians

7.1 Installation and electrical connection



Danger

Electric shock when live parts are touched!

An electric shock can lead to death!

- Isolate all connection cables before working on the device and cover any live parts in the area!



Caution

Impermissible heating if load of the device is too high!

The device and the connected cables may get damaged in the connection area!

- Do not exceed the maximum current carrying capacity!



Caution

Risk of destruction with parallel connection of several motors on one output!

Final position switches could fuse together. Motors, hangings and the device may be destroyed!

- Only connect one motor per output!

Installing the device



Note!

Observe temperature range. Provide sufficient cooling.

- 1 Install the device on a TH 35 7.5-15 DIN rail according to IEC 60715:2017 / EN 60715:2017 ([Bild 4](#)).

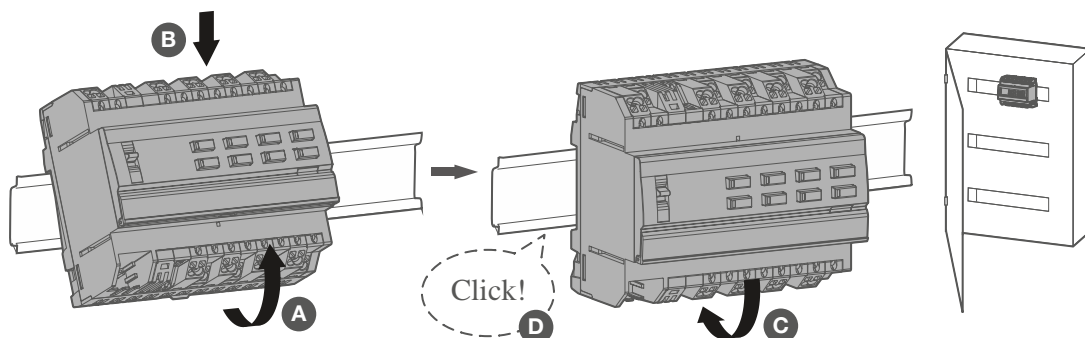


Fig. 4: Installing the device on the DIN rail

Connecting the device

☑ The device is installed on the DIN rail in accordance with ISO 60715.

- ① Connect the load to the outputs of the device.
- ② Connect the connection cables for the power supply.

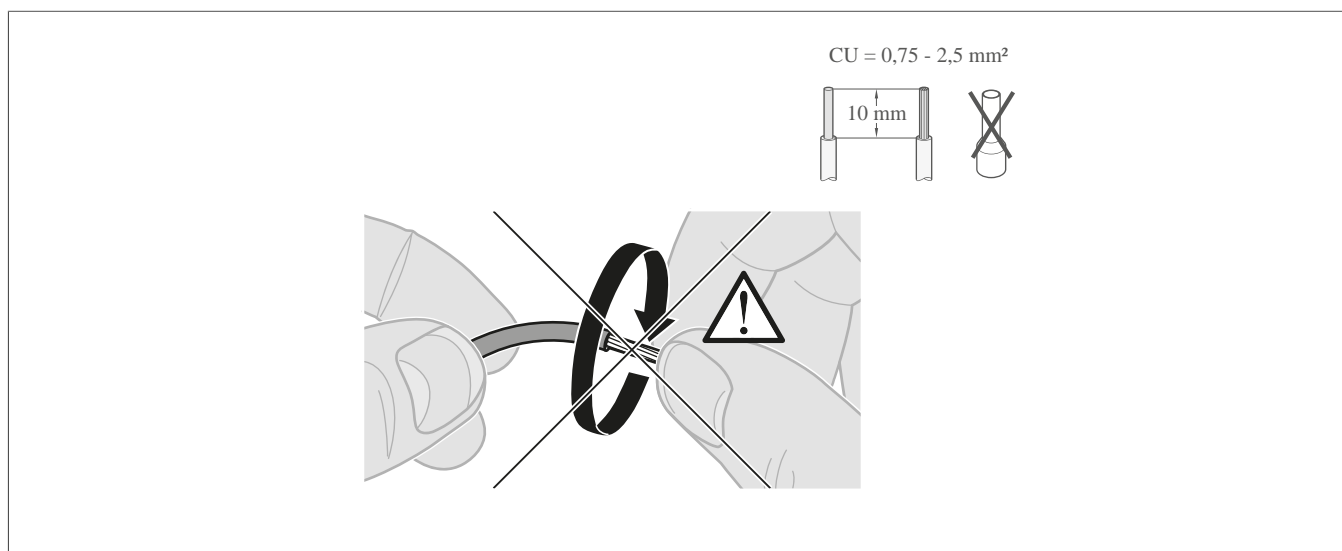


Fig. 5: Prepare connection cables.

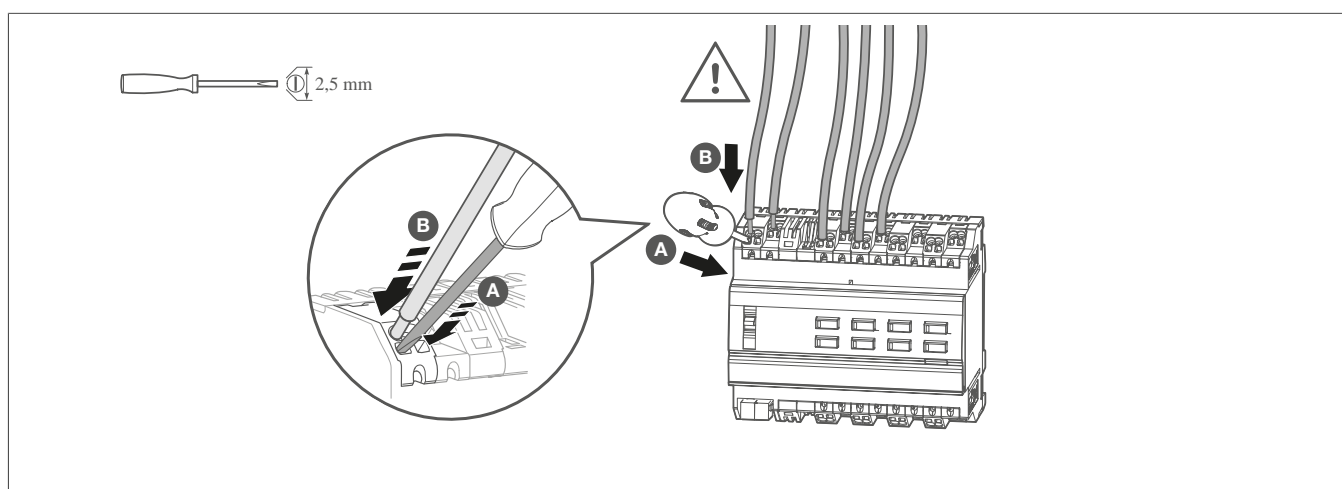


Fig. 6: Connecting the device using the plug-in terminal

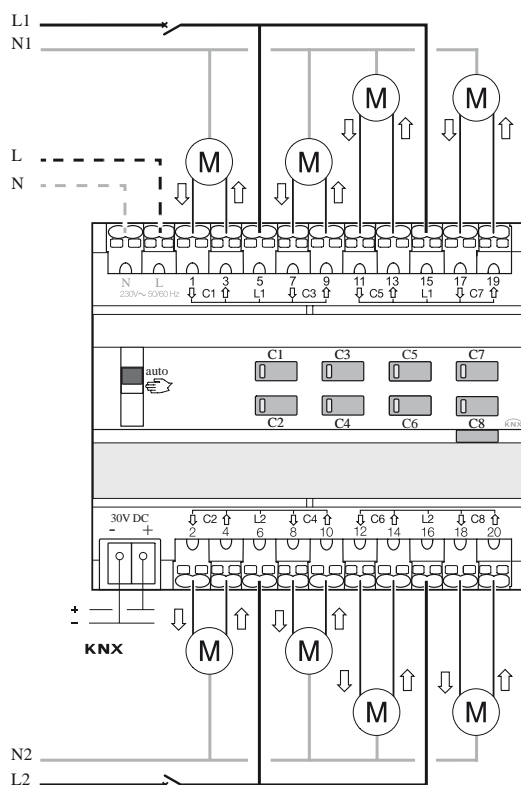


Fig. 7: Device connection

- 3 Connect the connection cables for the motors.

Connecting the bus cable

- ☑ The connection cables for the load and power supply are connected.

- 1 Connect the bus cable via the bus connection terminal.

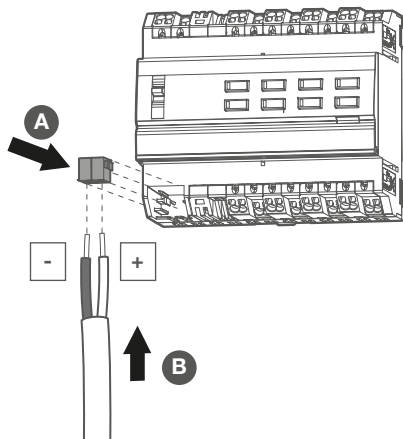


Fig. 8: Connecting the bus cable

7.2 Commissioning

The device can be programmed in three ways:

- KNX systemlink mode (standard ETS programming) [siehe Inbetriebnahme im KNX Systemlink Modus \(ETS\) , Seite 16](#)
- KNX Secure mode [siehe Inbetriebnahme im KNX Secure Modus , Seite 16](#)
- KNX easylink mode, [siehe Inbetriebnahme easylink , Seite 17](#)

Commissioning in KNX systemlink mode (ETS)

systemlink – loading the physical address and application software

☑ The slide switch for manual mode ([Bild 2/1](#)) is in position **auto**.

- 1 Switch on the mains voltage.
- 2 Switch on the bus voltage.
- 3 Press the programming button ([Bild 2/5](#)).

The button lights up.



If the button does not light up, no bus voltage is present on the device.

- 4 Load the physical address into the device.
Status LED of the button goes out.
- 5 Note down the physical address on the labelling field ([Bild 2/4](#)).
- 6 Load the application software into the device.

Commissioning in KNX Secure mode

☑ Das Gerät ist betriebsbereit eingebaut und angeschlossen.

- 1 Den sicheren Inbetriebnahmemodus in der ETS aktivieren.
- 2 Das Gerätezertifikat (QR-Code) eingeben ([Bild 11](#)) oder scannen ([Bild 10](#)) bzw. dem Projekt in der ETS hinzufügen.



Hinweis!

Zum Scannen des QR-Codes ist eine hochauflösende Kamera zu verwenden.

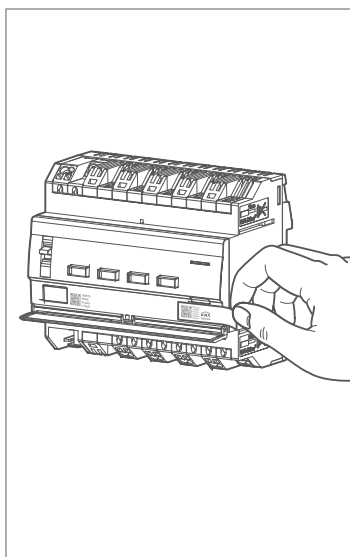


Fig. 9: Gerätezertifikat vom Gerät entfernen (Abbildung ähnlich)

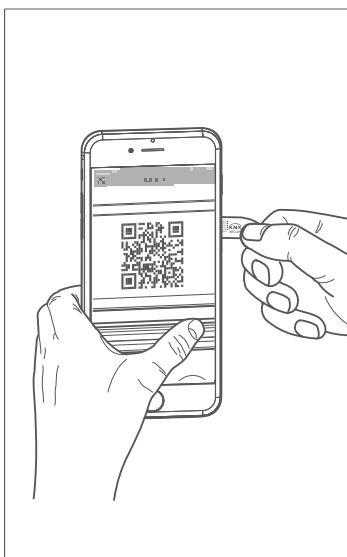


Fig. 10: QR-Code scannen

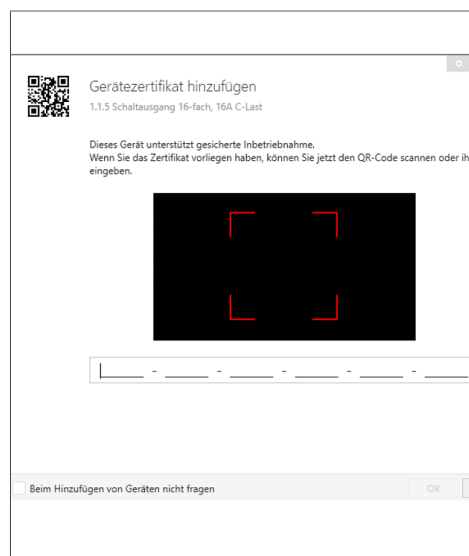


Fig. 11: QR-Code manuell eingeben

- 3 Alle Passwörter dokumentieren und sicher aufbewahren.
- 4 Das Gerätezertifikat (QR-Code) vom Gerät entfernen und sicher mit den Passwörtern aufbewahren.
- 5 Das Gerätezertifikat mit physikalischer Adresse und Produktreferenz in einer Liste notieren.

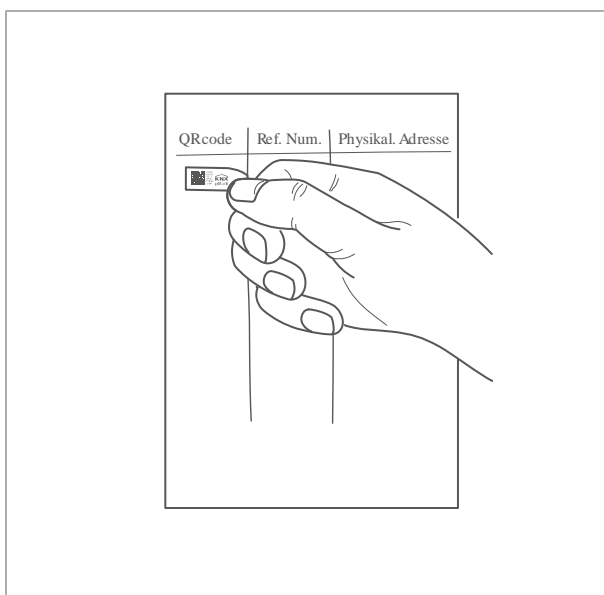


Fig. 12: Gerätezertifikat in die Projektdokumentation einkleben

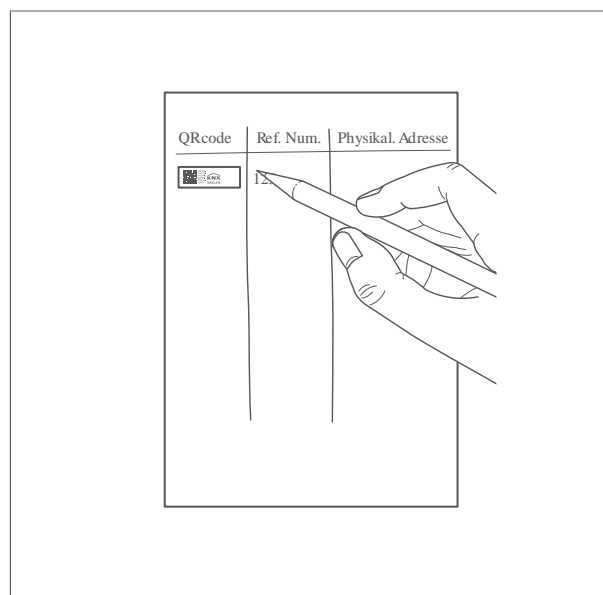


Fig. 13: Artikelnummer und physikalische Adresse zum Gerätezertifikat notieren

Easylink

The function of the device is configuration-dependent. The configuration can also be performed using devices developed specially for simple setting and commissioning.

This type of configuration is only possible with devices compatible with the easylink system. easylink stands for easy, visually supported commissioning. Preconfigured standard functions are assigned to the inputs/outputs by means of a service module.

7.2.1 Commissioning the device

☑ The device has been installed and connected correctly.

- ① Switch on the mains voltage at the outputs.
- ② Switch on the bus voltage.

Depending on the parameterisation, the status LEDs of the operation buttons for manual mode light up.

Determine operation time and slat adjusting time

In blind/roller shutter operation, the operation time for positioning the sunshade is important. The position is calculated based on the operation time. The slat adjusting time for slat blinds, determined by the design, is part of the total operation time. The aperture angle of the slats is therefore set as the operation time between the opened and closed position.



The operation time for UP is normally longer than the operation time for DOWN and must be measured separately if necessary.

- ① Measure the UP and DOWN operation time of the hanging.
- ② Measure the slat adjusting time between **OPEN** and **CLOSED**.
- ③ Enter the measured values into the parameter setting – running time or slat step time.

Functional test


The functionality of the outputs is displayed via the status LED of the operation button ([Bild 2/6](#)).

LED status	Meaning of the signal
LED lights up permanently	Roller shutter, blinds or hangings are in the final position.
LED flashes	The load is activated and the motors turn left or right.

Table 3: Output function test

The individual outputs can be switched in manual mode via the operation button ([Bild 2/6](#)).

- ☑ The device has been installed and connected correctly.
 ☑ The mains and bus voltage are switched on.
 ☑ The roller shutter/blind is in the top final position.

- Move the slide switch ([Bild 2/1](#)) to the manual mode  position.
- Press the manual operation button ([Bild 2/6](#)) briefly (jog mode).

The connected roller shutter/blind gradually moves down and the status LED lights up each time the button is pressed.

OR:

- Hold down the manual operation button ([Bild 2/6](#)) for > 2 s.

The connected roller shutter/blind moves to the bottom final position and the status LED lights up permanently.

7.3 Dismantling

Disconnecting the load cables

- ☑ All the cables delivering voltage to the device are switched off.
- Disconnect the connection cables on the device.

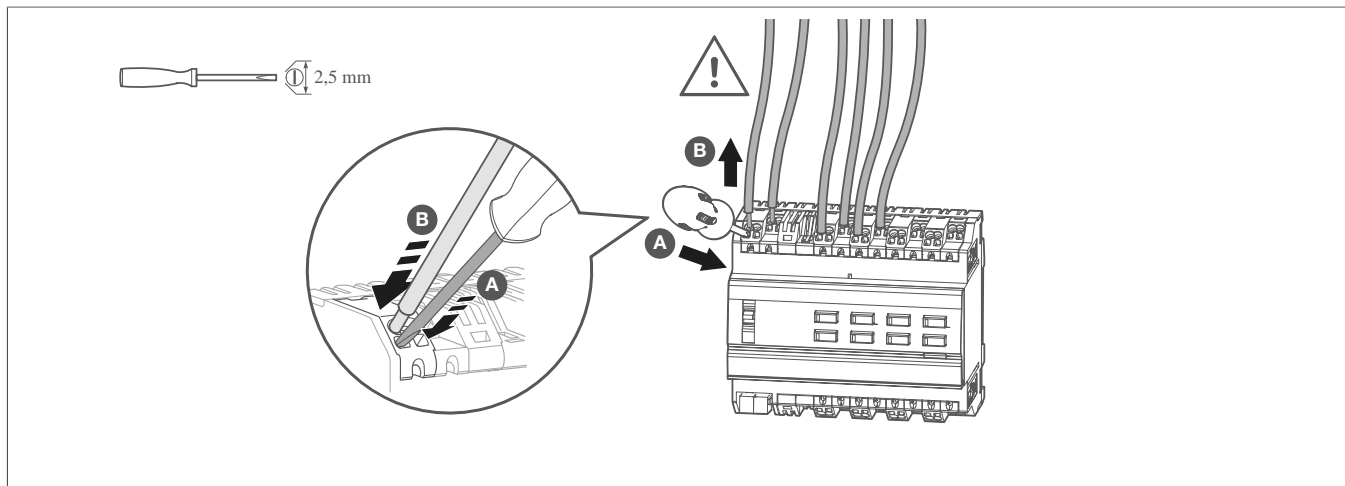


Fig. 14: Disconnecting the connection cables

Removing the bus connection terminal

- ☑ The bus voltage is switched off.
- Remove the bus connection terminal from the device.

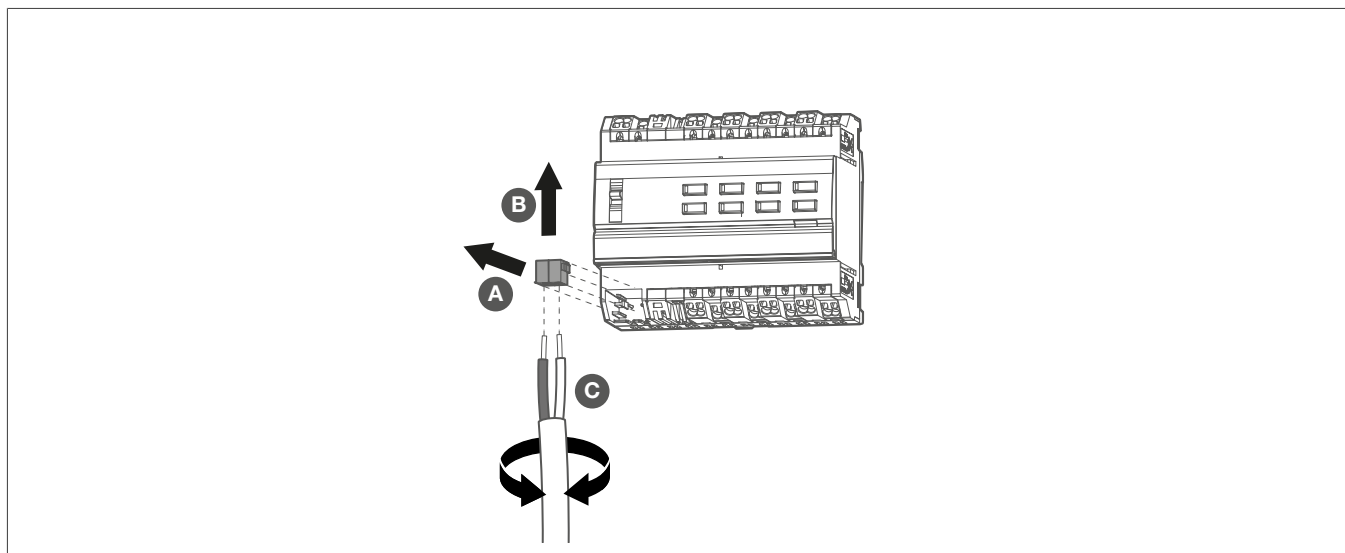


Fig. 15: Remove the bus connection terminal

Dismantling the device

- ☑ The bus connection cable and the load cables have been disconnected.
- Remove the device from the DIN rail.

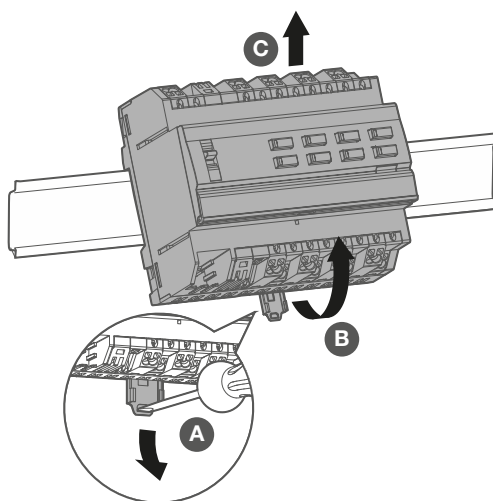


Fig. 16: Removing the device from the DIN rail



Dispose of the device in line with the corresponding guidelines of the country ([siehe Disposal](#)) or, if you have a warranty claim, contact the point of sale ([siehe Warranty](#)).

8 Appendix

8.1 Technical data

KNX Medium	TP1-256
Commissioning mode	systemlink, easylink
Supply voltage via grid	230 V ~, +10 %/-15 % 240 V ~, ±6 %
KNX supply voltage	21 - 32 V \square SELV
BUS connection mode	Connecting terminal
KNX current consumption	2 mA
Consumption without load	780 mW
KNX max. current consumption	5 mA
Own consumption on mains	Max. 1 W
Max. power dissipation	Max. 2 W
Upstream protection device	10 A
Interlock time when changing the direction of travel	software-dependent
Operating altitude	Max. 2000 m
Degree of contamination	2
Surge voltage	4 kV
Degree of protection of housing	IP20
Degree of protection of housing under front plate	IP30
Impact protection	IK04
Overvoltage class	III
Operating temperature	-5 to +45 °C
Storage/transport temperature	-20 to +70 °C
Maximum switching cycle rate at full load	20 switching cycles/minute
Connection capacity	0.75 ... 2.5 mm ²
Standards	EN 50491-3; EN 60669-2-1
Dimensions	6 modules, 6 x 17.5 mm

8.2 Troubleshooting

Manual operation not possible.

Switch (Bild 2/1) not set to .

 Set switch to .


Manual operation is not enabled (systemlink).

 Enable manual operation via application software.

Bus operation not possible.

Bus voltage is not present.

 Check bus connection terminals for correct polarity.

 Check bus voltage by briefly pressing the programming button (Bild 2/5), red LED lights up if bus voltage is present.

Manual mode is active. Switch (Bild 2/1) is in position .

 Move the switch (Bild 2/1) to position **auto**.

Roller shutters/blinds do not move to the final position.

Operation time for the roller shutters/blinds is set incorrectly.

 Check operation times. Check measurements and reprogram device if necessary.

8.3 Accessories

Optional accessories

KNX bus connection terminals, 2-pole, red/black	TG008
KNX system cable, Y(ST)Y, 2x2x0.8	TG01x

8.4 Regulatory Compliance Australia

8.5 Disposal



Correct disposal of this product (electrical waste).

(Applicable in the European Union and other European countries with separate collection systems).

This marking shown on the product or its documentation indicates that it should not be disposed of with other household waste at the end of its working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate this device from other types of waste. Recycle the device responsibly to promote the sustainable reuse of material resources.

Household users should contact either the dealer where they purchased this product, or their local government office, for details of where and how they can take this device for environmentally safe recycling.

Commercial users should contact their supplier and check the terms and conditions of the purchase contract. This product should not be mixed with other commercial waste for disposal.

8.6 Warranty

We reserve the right to implement technical and formal changes to the product in the interest of technical progress.

Our products are under guarantee within the scope of the statutory provisions.

If you have a warranty claim, please contact the point of sale.



Hager Controls

BP10140

67703 Saverne Cedex

France

+33 (0) 3 88 02 87 00

info@hager.com

hager.com