Data sheet RMT

Mechanical Room Thermostat





Application:




RMT room thermostats can be used for room temperature control of volt actuators or similar designs.

Principle:







Ordering:

Code No.	Model No.	Operating Voltage	Switching Voltage	Scale	Night Set Back
087N119601	RMT-24	. 24 VAC	24 VAC	°F	No
087N1196	RMT-24			°C	No
087N1197	RMT-24R			°C	Yes External timer required

Data:

	RMT-24	
Temperature Range °F (°C)	46-86 (8-30)	
Contact type	SPDT	
Contact material	Ag	
Contact rating, Ohmic A a.c.	10	
Contact rating, Inductiv cos ϕ = 0.6 A a.c.	4	
Contact rating, Start current A a.c.	24	
Contact rating, Ohmic A d.c.	1	
Contact rating, Minimum mA a.c./mA d.c.	70	
Thermal deviation °F (°C)	<1	
Cut-in stability °F (°C)	<0.5	
Time constant (Vair = 0.15 m/sec) min	<14	
Thermal differential °F (°K) (with accelerator)	<1.4 (<0.8)	
Storage temperature range °F (°C)	0-120 (-20 - +50)	
Working temperature range °F (°C)	15-120 (-10 - +50)	
Air humidity % RH	40-60	
Weight in oz. (grams)	5.3 (150)	


Data sheet

RMT

Mechanical Room Thermostat



Electrical Connection:

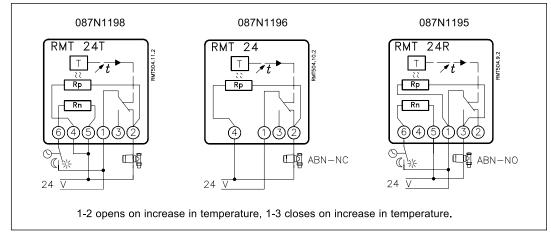


1.) Setback Feature:

Both RMT-24 (087N1198) and RMT-24R (087N1195) contain setback resistors.

To utilize this feature, the thermostat must be connected to an auxilliary time control (not supplied).

Dimensions:

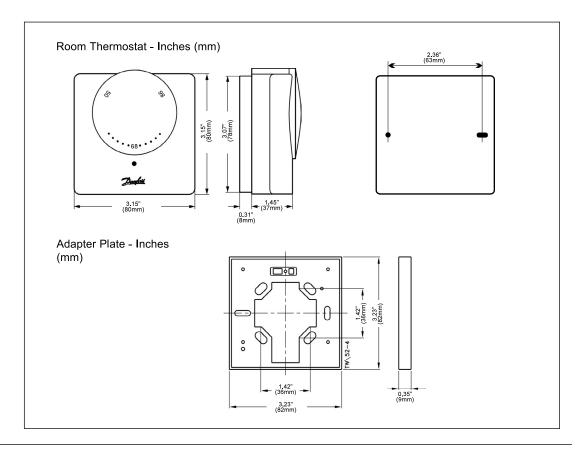

Danfoss can accept no responsibility for possible errors in printed materials and reserves the right to alter its products without notice.

All trademarks in this material are property of the respective companies. Danfoss and Danfoss logotype are trademarks of Danfoss A/S. All rights reserved.



Danfoss

Toronto, ON Toll Free: 866-375-HVAC (4822) Fax: 416-352-5981 www.na.heating.danfoss.com

Danfoss

Baltimore, MD Toll Free: 866-375-HVAC (4822) Tel.: 443-512-0266, Fax: 443-512-0270 www.na.heating.danfoss.com