### Ref. CCT15720 - CCT15721 CCT15722 - CCT15723


**(en**)

**IHP** 



# Schneider **2** Electric


### Cable

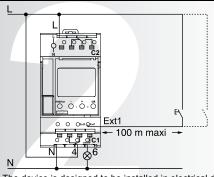


The device is designed to be installed in electrical distributions on a DIN rail (in accordance with EN 60715).

The external input operating mode is defined in the chapter "Adapt the configuration -

### Discover your IHP

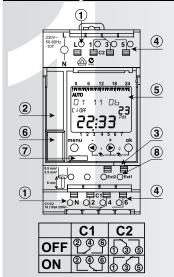

- 1 230 V AC supply +10 %, -15 %, 50/60 Hz
- (2) Leaflet-holder
- 3 Sealable cover
- (4) Output contacts
- 5 LCD screen (back-lit on cat. nos. CCT15721 and CCT15723)
- 6 Programming key storage
- Programming key connector (only cat. nos. CCT15721 and CCT15723)
- (8) External control input only for cat. nos. CCT15721 and CCT15723 (Ext 1 for channel 1 and Ext 2 for channel 2)

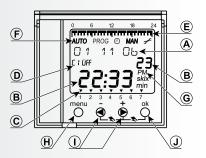

- (A)(B)(C) Date, Time, Day (Day 1 = Monday by default) (D) Output contact status display (alternating C1/C2 for cat. nos. CCT15722 and CCT15723)
- (E) Viewing On periods per 30-minute seament
- F Operating mode: "AUTO", "PROG": programming, " (2) ": time setting, "MAN": programming Holiday, Time
- Delay and Random functions for cat. nos. CCT15721 and CCT15723, " 🗲 ": adapt the configuration
- (G)"PM": afternoon
- (H)"Menu": select the operating mode (I)"-", "+": value setting and navigation keys
- (J)"ok": flashing information validation key

Reset by pressing simultaneously the 4 keys "+", "-", "Menu" and "ok" i.e. (H)(I) and (J).

## Configure

On energisation or once you have carried out a Reset (see Discover chapter):

- Choose the language (French, English, etc.).
- Choose to delete or to keep the program existing in the product.
- Set the year, month, day and time.
- Choose the summer/winter time changeover parameters.

Once this phase is completed, your IHP will move to the "AUTO" mode and operate with the elements defined opposite.

If you do not agree with the flashing value or word: scroll up and down the display using the "-" and "+" keys. To confirm the flashing value or word: validate with "ok".

If you are lost: press "Menu" to return to the "AUTO" mode without saving the last modification.

If you do not press a key for 2 minutes: your IHP will move to the "AUTO" mode and operate with the elements defined opposite

| Zone      | Summer time                       | Winter time                      | Comments  |
|-----------|-----------------------------------|----------------------------------|---|
| EUROPE    | Last Sunday in<br>March at 2 a.m. | Last Sunday in October at 3 a.m. |   |
| GB/IRL/P  | Last Sunday in March at 1 a.m.    | Last Sunday in October at 2 a.m. | Great Britain - Portugal                                    |
| FIN/GR/TR | Last Sunday in<br>March at 3 a.m. | Last Sunday in October at 4 a.m. | Finland - Greece - Turkey                                   |
| CDN       | First Sunday in April at 2 a.m.   | Last Sunday in October at 3 a.m. | Canada  |
| FREE RULE | As per choice                     | As per choice                    | Choice of month, week, day (Monday, Tuesday, etc.) and time |
| FIX DATE  | As per choice                     | As per choice                    | Choice of month, date (01, 02) and time                     |
| NONE      | -                                 | -                                |   |

### Program your IHP "PROG"

The IHP allows you to program 2 types of control: switching operations (On / Off) and pulses (On / Off, on IHP+ products cat. nos. CCT15721 and CCT15723).

To create an operating period: program an On switching followed by an Off switching. The "COPY" function allows you to repeat the created switching operation or pulse for other days of the week and save memory space (creation of a "block").

Access the "PROG" mode by pressing the "Menu" key; you now have 5 possibilities:

- "NEW": to build the program and enter it in the memory.
- "CHECK": to view the program.
- "MODIFY": to update the program already in the memory.

If the transition selected to be modified is repeated on other days of the week, the product proposes "MODIFY BLOCK", this function lets you modify all identical transitions (type and

■ "DELETE": to delete part of or the whole of the program (date, time and choice of language

If the transition selected to be deleted is repeated on other days of the week, the product proposes "DELETE BLOCK", this function lets you delete all identical transitions (type and time).

"END": to leave the "PROG" mode

### Date / Time " 4 "

Modify the time, date, summer/winter time, day of the week, time format, date format.

Press "Menu", access the mode " (1) " using the "+" key:

- Change the time and date.
- Choose summer/winter time (see the table in the "Configure" chapter).
- Define the 1st day of the week (for example Monday for Europe).
- Modify the format of the date "FORM DATE":
- D/M/Y
- □ M/D/Y □ Y/M/D.
- Modify the format of the time "24h / 12h":
- □ 24h display
- □ 12h display.

#### In this mode you can

- Program a holiday period "HOLIDAY" (temporarily cancel On periods by configuring start and end of absence dates and times).
- On cat. nos. CCT15721 and CCT15723, you can also:
- □ modify for an adjustable duration, operation (On or Off on channel) from the current time "TIMER"
- use the product in random mode "RANDOM" (to carry out presence simulation).

  To carry out one of these operations, you must: press "Menu", access the "MAN" mode via
- "HOLIDAY": there are four different operation types in this Holiday mode:
- "ON": output activated "OFF": output de-activated
- "RANDOM1": random operation in a fixed **On** range "RANDOM2": **On** operation in a range with a random start and end.

Once you have defined the type of operation, you must enter the start and end of absence dates.

- "TIMER": to define the status of the waiver and its duration.
- "RANDOM":
- "RANDOM1"
- "RANDOM2"

Its operation is identical to the Holiday mode, but without limitation in duration.

### ON-OFF override "२ू.०" Channel 1, "र्रे.७" Channel 2

- Activate ON override or OFF override (until the next switching operation) by pressing simultaneously both keys " ﴿ ﴾ " for C1 or " ﴿ ﴾ " for C2 for less than 2 s. The output contact changes status:
- □ the IHP indicates by "C1 OVERRID" or "C2 OVERRID" the new status of the output contact
- return to the automatic mode by pressing both these keys for less than 2 s.
- Move to permanent ON or permanent OFF by pressing simultaneously both keys " 🍳 🕏 " for C1 or " o o " for C2 for more than 2 s: each time you press a key for more than 2 s, the output contact changes status:

  □ the IHP indicates by "C1 PERM" or "C2 PERM" the new status of the output contact
- □ return to the automatic mode by pressing both these keys for less than 2 s.
- The IHP also allows external override by an external pushbutton or switch, cabled on the terminal (reference 8), cat. nos. CCT15721 and CCT15723):

permanent On or Off override by external input (switch) takes priority over the ON - OFF override function of the product

For configuration of the external input, see "Adapt the configuration \*".

### Electronic key (cat. no. CCT15861)

- You have an electronic key to facilitate programming of your IHP. The key should:
- □ be placed in its compartment (beneath the "Menu" and "-" keys) if you use it
- □ be placed under the leaflet-holder when it is not used.

Before placing your electronic key, set the product to "Auto".

Insert the electronic key and a specific menu will appear.

 $\triangle$  Installation of the electronic key inhibits the "Menu" and "-" keys. To move and validate, you must use "+" and "OK".

- "COPY KEY → TSWI": to copy the electronic key program to your IHP.
   "COPY TSWI → KEY": to copy the IHP program to the electronic key.
   "RUN KEY": to operate the IHP with the programming memorised in the electronic key, without program transfer.
- "CHECK KEY": to read the content of the electronic key, each programming step is then displayed by pressing the "+" key. Press "OK" to return to the main menu.
- "END": to remove the electronic key.

An electronic key programming kit (cat. no. CCT15860) including a PC/electronic key interface, a lead, an electronic key and a programming software lets you program your electronic key directly from a PC.

### Load table

- Permissible output contact power:
- $\square$  resistive loads: I max. = 16 A 250 V $\sim$ , I min. = 200 mA 12 V $\simeq$
- □ motors: 2300 VA.

| Lighting type/load  | Max. power   |
|---|--|
| Resistive load (cos φ = 1)                                | 16 A   |
| Inductive load (cos φ = 0.6)                              | 10 A   |
| Incandescent lamp (230 V)                                 | 2600 W   |
| Halogen lamp (230 V)                                      | 2600 W   |
| Fluorescent tube  | 2300 VA  |
| Parallel compensated fluorescent tube, max. 730 W (80 µF) | 17 x 40 W (4.7 μF), 11 x 58 W (7 μF),<br>4 x 100 W (18 μF) |
| Compact fluorescent lamp (CFL), max. 170 W                | 24 x 7 W, 15 x 11 W, 8 x 20 W                              |
| LED up to 2 W   | 30 W   |
| LED between 2 W and 8 W                                   | 100 W  |

For the other applications, relay using a CT contactor.

## Adapt the configuration " 🗲 "

In this mode, you can:

- View the counter indicating output operating time and, if you want, reset this counter.
- Define the type of external input (this choice must be made in keeping with the element cabled to the product) and its operating mode (only on cat. nos. CCT15721 and CCT15723). There are three possible choices: 
  □ NOT ACTIVE
- □ BUTTON
- □ SWITCH

Once the type is defined, you must define the operating mode:

- for the pushbutton: OVERRIDE: temporary forcing until the next switching
- TIMER: press to start a time delay for a set period of time.
   This time delay is possible in On or Off mode at output level.
- □ for the switch permanent On
- permanent Off
- blocking

For the first two choices, the switch is open in normal operation and its closure results in an On or Off at the output. For the third choice, the switch is closed in normal operation and its opening imposes an Off (relay open) at the output.

- Define operation of LCD illumination (only on cat. nos. CCT15721 and CCT15723).
- □ there are two choices:
- 1 min off: lighting goes off 1 min after the last time one of the front face keys is pressed
- always on.
- Modify language.
- Return to the product initialisation phase ("Configure" chapter).

To perform one of these operations you must: press "Menu", access the " 🗲" mode using the "+" key.

- "OPERATING HOUR": access the "output activated" counter
- □ "SHOW HOUR": read the counter
- □ "DELETE": reset the counter.
- "EXT INPUT": to define the input type and operation.
- "LCD-ILLUMINATION"
- "AFTER 1 MINUTE OFF": lighting goes off 1 minute after the last time a key is pressed
- □ "ALWAYS ON"
- "LANGUAGE"
- "FACTORY SETTINGS".

### **Technical data**

- Consumption:
- 1 channel max, 0.8 W
- 2 channels max. 0.8 W
- Memory: 56 switching operations except cat. nos. CCT15721 and CCT15723, 84 switching operations
- Minimum time between two switching operations: 1 minute
- Back-up of program and time by lithium battery: operating reserve: 6 years
- Operating temperature: -25°C to +45°C
- Insulation class: II as per EN 60730-1 in installed state
- Degree of protection: IP20B as per EN 60529
- Connection terminals: 2 x 0.5 to 2.5 mm², rigid and flexible wires
  - Overall dimensions: 5 modules

  - Pollution degree: 2
     Device of 1 STU type in accordance with IEC/EN 60730-2-7.

### **External input**

- Voltage: 230 V~ +10 %, -15 %
- Frequency: 50/60 Hz
- Input current: max. 1.2 mA Consumption: max. 0.3 W
- Cable length: max. 100 m.

40126BC - 06/2012

4 Réalisation : SEDOC 04 76