

SpaceLogic Sensors

SLP Series Air Quality Sensors – BACnet and Modbus



Note: A subset of models shown.

Product Description

The SpaceLogic SLP Series of air quality sensors for living space is a flexible multisensor platform for use with BAS controllers designed to accept BACnet or Modbus outputs. Housings are available in Medium matte white and Optimum faces available in black and white. All housing types are available with three user interface options: touchscreen, LCD with three buttons and blank. CO₂ and temperature sensors are included with all SLP Series air quality sensors. Models with VOC sensors and relative humidity sensors are also available.

Features

- Medium matte white housing or optimum glass panel housing available in white or black
- Field calibratable non-dispersive infrared CO₂ sensor
- Replaceable RH element available in 1% & 2% with NIST certificate
- VOC sensor available
- Temperature output on all models
- 61 mm (2.4") backlit color touchscreen and LCD, three button display options available
 - Digital temperature indication (0.1° display resolution of °F or °C)
 - Digital humidity indication (0.1% RH display resolution)
 - Digital CO₂ indication (1 ppm display resolution)
 - Stoplight feature for visual indication at user-configurable CO₂ threshold levels (touchscreen models only)
 - Selectable temp, RH and fan speed setpoint
 - Configurable screen/button lock and display timeout
 - Override
- Selectable BACnet MSTP and Modbus outputs via RS-485
- 18-24 AWG screw terminals

Available Products Matrix

SLP	Housing	User Interface	CO ₂ Sensor	RH Sensor*	Example:
	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	SLP <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/> <input type="checkbox"/>
	S = Medium white matte housing	T = Color touchscreen	C = NDIR CO ₂	2 = 2%	
	W = Optimum white housing	L = 3-button LCD display	CV = NDIR CO ₂ / VOC	X = None	
	B = Optimum black housing	X = None			

*Replaceable RH module available to be ordered separately per table below.

Replaceable RH Elements

Model	Description	Temp. Calibration	RH Calibration
SLXRHS2N	Replaceable RH sensor, 2% with NIST certificate	N/A	2-point calibration
SLXRHS2X	Replaceable RH sensor, 2%	N/A	2-point calibration
SLXRHS1N	Replaceable RH sensor, 1% with NIST certificate	N/A	2-point calibration

USA: +1 888-444-1311
 Europe: +46 10 478 2000
 Asia: +65 6484 7877
www.schneider-electric.com

Life Is On



Specifications

Operating Environment			
Input power	Class 2; 20 to 30 Vdc, 24 Vac, 50 to 60 Hz		
Protocol output	BACnet or Modbus via RS-485, selectable		
Operating temp. range	0 to 50 °C (32 to 122 °F)		
Operating humidity range	0 to 95% RH non-condensing		
Housing material	High impact ABS plastic		
IP rating	IP 30		
Mounting location	For indoor use only. Not suitable for wet locations.		
Surface mount	The device can be surface mounted on Single Gang J-Box, British Standard and CE60 wall boxes		
CO ₂ Sensor			
Sensor type	Non-dispersive infrared (NDIR), diffusion sampling		
Output range	0 to 10,000 ppm		
Accuracy	±30 ppm ±3% of measured value		
Repeatability	±20 ppm ±1% of measured value		
Response time	<60 seconds for 90% step change		
VOC Sensor			
Sensor type	Solid state		
Output range	0 to 100% AQI for VOC		
Accuracy	±15% of measured value		
Output scale	0 to 1,000 ppb of total VOC (TVOC)		
AQI table*	Level	Ventilation Recommendation	TVOC (ppb)
	>61%	Greatly increased	>610
	20 to 61%	Significantly increased	200 to 610
	10 to 20%	Slightly increased	100 to 200
	5 to 10%	Average	50 to 100
	0 to 5%	Target value	0 to 50
RH Sensor			
HS sensor	Solid state capacitive, replaceable		
Accuracy (includes hysteresis)**	±3.8% RH from 10 to 60% RH @ 25°C (77 °F) ±4.8% RH from 60 to 80% RH @ 25°C (77 °F) ±5.8% RH from 80 to 100% RH @ 25°C (77 °F)		
Linearity	Included in accuracy specification		
Stability	±1% @ 20°C (68 °F) annually for 2 years		
Output range	0 to 100% RH		
Temperature coefficient	±0.1% RH/°C above or below 25 °C (77 °F) typical		
Temperature Sensor			
Sensor type	Solid state, integrated circuit		
Accuracy	±0.2 °C (±0.4 °F) typical		
Resolution	0.1 °C (0.1 °F)		
Range	0 to 50 °C (32 to 122 °F)		


Display Models	
Touchscreen	61 mm (2.4 in), color, backlit, capacitive, 240x300px Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
	52mm (2.05 in), segmented with 3 buttons Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
LCD	52mm (2.05 in), segmented with 3 buttons Setpoint: Temperature, humidity or fan speed selectable Timeout override: Display timeout Lockout override: Touchscreen/button lockout
Setpoints***	
Temperature setpoint	Scale: 0 to 50 °C (32 to 122 °F) max., adjustable span
Humidity setpoint	Scale: 0 to 100% RH
Fan speed setpoint	Off, Low, Medium, High, Auto
Override	
Override button	Display models feature momentary override button
Wiring Terminals	
Terminal blocks	Screw terminals, 18-24 AWG
Screw terminal torque	0.2 N-m (2.0 in-lbF) max.
Regulatory Information	
Agency approvals	UL 916
	European Conformance CE: EN 60730-1, EN 60730-2-9, EN 60730-2-13, EN 61000-6-2, EN 61000-6-3, EN 61000 Series - Industrial Immunity, EN 61326-1
	FCC Part 15 Class B, REACH, RoHS, Green Premium, RCM (Australia), ICES-003 (Canada), EAC (Russia), UKCA (UK)

*Air Quality Index for VOC aligns with TVOC levels for IAQ as specified by the WHO (World Health Organization).


**Humidity sensor overall accuracy should include: accuracy, temperature coefficient and stability. Humidity accuracy is shown as an absolute value, so if testing accuracy with a hand-held device, you must check for deviation in its readings instead of calculating the percentual deviation. Additionally, you must consider the overall accuracy of the hand-held device in the comparison.

***On display models only.


Dimensions mm (in.) Optimum Housing

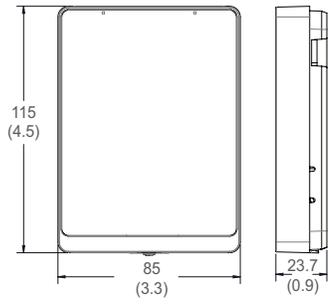

Medium Housing

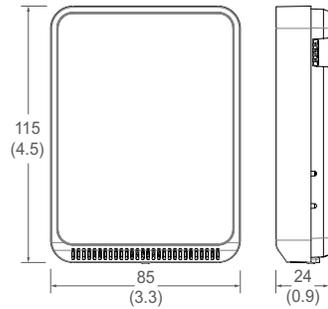

Base Hole Measurement

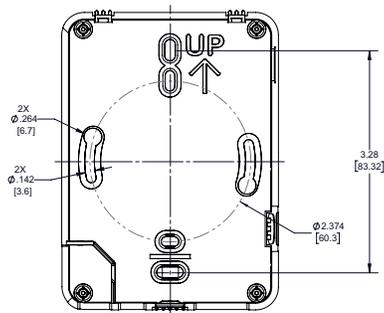

Safety Information Important Information

Read these instructions carefully and look at the equipment to become familiar with the device before trying to install, operate, service or maintain it. The following special message may appear throughout this bulletin or on the equipment to warn of potential hazards or to call attention to information that clarifies or simplifies a procedure.

NOTICE

NOTICE is used to address practices not related to physical injury.

WARNING

WARNING indicates a hazardous situation which, if not avoided could result in death or serious injury.

Please Note

Electrical equipment should be installed, operated, serviced and maintained only by qualified personnel. No responsibility is assumed by Schneider Electric for any consequences arising out of the use of this material.

A qualified person is one who has the skills and knowledge related to the construction, installation and operation of electrical equipment and has received safety training to recognize and avoid the hazards involved.

Safety Precautions

WARNING



HAZARD OF ELECTRIC SHOCK, EXPLOSION OR ARC FLASH

- Apply appropriate personal protective equipment (PPE) and follow safe electrical work practices. See NFPA 70E or CSA Z462.
 - This equipment must only be installed and serviced by qualified electrical personnel.
 - Turn off all power supplying this equipment before working on or inside equipment.
 - Always use a properly rated voltage sensing device to confirm power is off.
 - Replace all devices, doors and covers before turning on power to this equipment.
- Failure to follow these instructions can result in death, serious injury or equipment damage.**

This product is intended for use in HVAC and building environmental control applications.

It is not intended for direct medical monitoring of patients.

Read and understand these instructions before installing this product.


The installer is responsible for all applicable codes.

If this product is used in a manner not specified by the manufacturer, the protection provided by the product may be impaired. No responsibility is assumed by the manufacturer for any consequences arising out of the use of this material.

NOTICE

PRODUCT DAMAGE AND INACCURATE READINGS

- Mount product vertically at a height that is between 3 to 5 feet (0.9 to 1.5 meters) above the floor [or 4 feet (1.2 meters) where the Americans with Disabilities Act needs to be followed]
- Mount product on a wall that is NOT exposed to the outside
- Install product far from windows, heat sources, door frames and at a minimum distance of 6 inches (15 centimeters) from any corner
- Drafts through conduits or other holes in the wall should be eliminated by plugging appropriate material into the cavity.
- Keep product wall mounted and the base cleared of any wire or other external material:

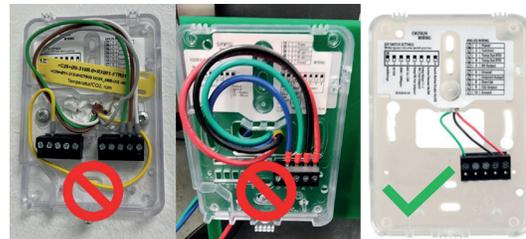

Failure to follow instructions can result in reduced accuracy, equipment damage or sensor fault.

USA: +1 888-444-1311
Europe: +46 10 478 2000
Asia: +65 6484 7877
www.schneider-electric.com

Life Is On



Installation

1. Remove the cover from the base at the bottom of the device.




2. Position the sensor base vertically on the wall 1.35 m (4.5 ft.) above the floor with the “UP” arrow facing upward. Locate away from windows, vents and other sources of draft. If possible, do not mount on an external wall, as this may cause inaccurate temperature readings.




3. Pull 18 or 22 AWG cable(s) through the hole in the backplate.



4. Mount the backplate onto the wall using the screws provided.

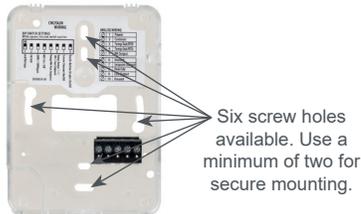

5. Connect the wires to the screw terminals. Do not over-tighten the screws.

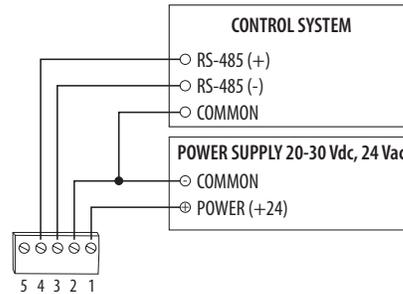


6. Configure the device.

Address Configuration:


Each device on a single network must have a unique address. Set the DIP switch labeled “ADDRESS” to assign a unique address before the device is connected to the network. If an address is selected that conflicts with another device, neither device will be able to communicate.

Address the device as any whole number between and including 1 to 127. Note that zero is not a valid address for Modbus; zero is a valid address for BACnet. Positions 1 through 7 of the “ADDRESS” DIP switch designate the address. Position 8 toggles between the Modbus and BACnet communication protocols, as shown in the diagram below. This is the left bank of DIP switches on the sensor.

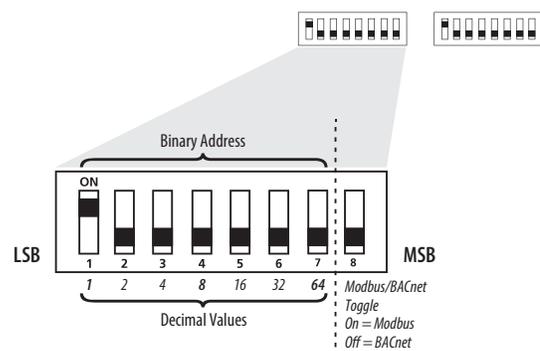

To set an address using the DIP switch, simply add the values of any switches that are in the ON position.

For example, an address of 73 is set as shown in the diagram below.

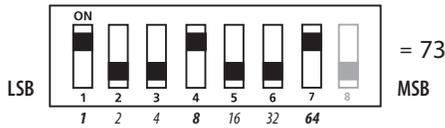


Position number 1 has an ON value of 1, position number 4 has an ON value of 8 and position number 7 has an ON value of 64 (1 + 8 + 64 = 73).

Communications Configuration:

Locate the DIP switch labeled “CONFIG”. The following parameters are configurable:

- Parity (Modbus only): None, Odd, None1 (one stop bit), Even
- Baud rate: 9600, 19200, 38400, 57600 (Modbus), 76800 (BACnet)

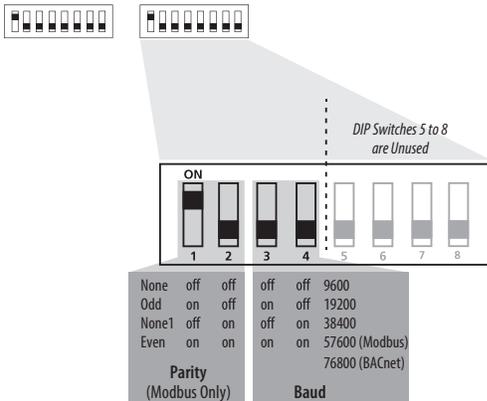

Example: No Parity, 19200 Baud

1	2	3	4	5	6	7	8
off	off	on	off	off	off	off	off
None		19200 Baud		Unused			

Modbus Point Map

Function Codes:

Function Code	Function
03	Read holding (RW) registers
04	Read input (RO) registers
06	Write single register*
16	Write multiple registers
01	Read coils
05	Write single coil
15	Write multiple coils

* Not supported.

All of these values correspond to BACnet objects with the same name. See the BACnet Conformance Statement for their definitions.

Note that an attempt to write to “read only” holding registers will give an error and the entire write command will not be executed even if writing to read/write locations were also requested. Exception code 2 is given in this case.

“Preserved” means the values is maintained through power outages.

32-Bit Input Registers (Read Only):

16-Bit Register Location	Description	Format		
1	Temp reading	32-bit floating point		
2				
3	Humidity reading	32-bit floating point		
4				
5	CO ₂ reading	32-bit floating point		
6				
7	VOC reading	32-bit floating point		
8				
9	Model number	4x16-bit ASCII characters as a single query		
10				
11				
12	Serial number	4x16-bit ASCII characters as a single query		
13~41			Unused	NA
42				
43	Serial number	4x16-bit ASCII characters as a single query		
44				
45				

32-Bit Holding Registers (Read/Write):

16-Bit Register		
Location	Description	Format
1	Temp setpoint	32-bit floating point
2		
3	Humidity setpoint	32-bit floating point
4		
5	Screen color set	32-bit
6		
7~39	Device name	4x16-bit ASCII characters as a single query
40	Fan speed	32-bit
41		
42	CO2 yellow threshold	32-bit floating point
43		
44	CO2 red threshold	32-bit floating point
45		
46~51	Unused	NA
52	Offset temp by this value	32-bit floating point
53		
54	Offset humidity by this value	32-bit floating point
55		
56	Offset CO2 by this value	32-bit floating point
57		
58	Offset VOC by this value	32-bit floating point
59		

Note: All holding registers are preserved during power outages.

Coils (Read/Write):

Register	Description
2*	CO ₂ stoplight
3*	Touch button disable
4*	Invoke CO ₂ calibration
5*	Temperature (°C)
6	Occupancy override
7*	Touch timeout
8*	Display shows humidity
9*	Display shows CO ₂ level
10*	Display shows VOC level
11	Set 400 ppm as CO ₂ baseline
12*	Display shows temperature setpoint on main screen
14*	Display shows setpoint

* Preserved during power outages.

BACnet Descriptions

Note: In the tables below, all properties are read-only unless otherwise noted. "Preserved" means the value is maintained through power outages.

Present_Value Range Restrictions:

Object Name	Minimum Value	Maximum Value
DEV - Object_Name	1 Character	65 Characters
Temperature Setpoint	Min_Pres_Value	Max_Pres_Value
Min_Pres_Value	0	Max_Pres_Value -1
Max_Pres_Value	Min_Pres_Value +1	50
Humidity Setpoint	Min_Pres_Value	Max_Pres_Value
Min_Pres_Value	0	Max_Pres_Value -1
Max_Pres_Value	Min_Pres_Value +1	100
Screen Color	1	4
CO2 Yellow Limits	400	10,000
CO2 Red Limits	400	10,000
Fan Speed	1	5
Device_Instance	0	4,194,302
Temp Offset	-5	5
Humidity Offset	-10	10
CO2 Offset	-250	250
VOC Offset	-10	10

Standard Object Types Supported:

Object Type	Supported Optional Properties	Writable Properties
Analog Input - AI	Reliability	None
Analog Value - AV	Min_Pres_Value Max_Pres_Value	Min_Pres_Value Max_Pres_Value Present_Value
Binary Value - BV	None	Present Value
Multistate Value - MSV	None	Present Value
Device - DEV	Max Info Frames Max_Master	APDU_Timeout Max_Master Object_Name

Objects Table:

Object Name	Object Identifier	Object Property
Room Temperature	AI 1	Temperature in room
Room Humidity	AI 2	Humidity in room
CO2 Sensor	AI 3	CO ₂ concentration
VOC Sensor	AI 4	VOC level
Temperature Setpoint*	AV 1	Setpoint value for temperature
Humidity Setpoint*	AV 2	Setpoint value for humidity
CO2 Yellow Limits*	AV 3	CO ₂ threshold to which the screen color changes from green to yellow

Objects Table (cont.)

Object Name	Object Identifier	Object Property
CO2 Red Limits*	AV 4	CO ₂ threshold to which the screen color changes from yellow to red
Temperature Offset*	AV 7	Offset value to add to the temperature sensor output value
Humidity Offset*	AV 8	Offset value to add to the humidity sensor output value
CO ₂ Offset*	AV 9	Offset value to add to the CO ₂ sensor output value
VOC Offset*	AV 10	Offset value to add to the VOC sensor output value
CO ₂ Stoptlight*	BV 1	ACTIVE enables CO ₂ Stoptlight INACTIVE disables CO ₂ Stoptlight
Touch Disable*	BV 2	ACTIVE disables Touch Response INACTIVE enables Touch Response
CO ₂ ABC Cal*	BV 3	ACTIVE enables ABC calibration INACTIVE disables ABC calibration
Temperature Units*	BV 4	ACTIVE displays temperature in Fahrenheit INACTIVE displays temperature in Celsius
Occupancy Override	BV 5	ACTIVE means room is not occupied INACTIVE means room is occupied
Screen Timeout*	BV 6	ACTIVE enables Screen Timeout INACTIVE disables Screen Timeout
Display Humidity*	BV 7	ACTIVE displays humidity on screen INACTIVE removes humidity from Screen
Display CO ₂ *	BV 8	ACTIVE displays CO ₂ level on screen INACTIVE removes CO ₂ level from screen
Display VOC*	BV 9	ACTIVE displays VOC level on screen INACTIVE removes VOC level from screen
CO ₂ FRC 400	BV 10	ACTIVE sets 400 ppm as CO ₂ baseline after Present_Value is read INACTIVE leaves CO ₂ baseline in last state (no action)

Object Name	Object Identifier	Object Property
Select Temperature Display*	BV 11	ACTIVE displays temperature setpoint on main screen INACTIVE displays temperature setpoint in upper left corner and current temperature on main screen
Display Setpoint*	BV 13	ACTIVE enables temperature setpoint display on home screen INACTIVE disables temperature setpoint display on home screen
Screen Color Set*	MSV 1	Selection for screen color theme
Fan Speed*	MSV 2	Fan speed selection

* Preserved during power outages.

Device Objects Table:

Object Name	Object Identifier	Object Property	Descrip.
Living Space Room Unit XXXXXXXX	Vendor_ID + nnn	Object_Identifier (R/W)	Unique value where nnn initially is the MS/TP address

BACnet Protocol Implementation Conformance Statement

Vendor Name: Schneider Electric

Product Name: Living Space Room Unit

Product Model: SLPXXXX

BACnet Protocol Version : 1

BACnet Protocol Revision: 16

Product Description: Environmental Sensor

BACnet Standardized Device Profile (AnnexL):

BACnet Application Specific Controller (B-ASC)

List All BACnet Interoperability Building Blocks Supported(Annex K):

DS-RP-B, DS-RPM-B, DS-WP-B, DM-DDB-B, DM-DOB-B, DM-DCC-B, DM-RD-B

Data Link Layer Options: MS/TP (Clause 9), baud rates, 9600, 19200, 38400, 76800

Device Address Binding: Static Device binding is not supported.

Networking Options: None

Character Sets supported: ISO 10646 (UTF-8)

- With sensor base fully installed, align top of cover to mounting tabs on top of sensor base. Swing cover downward until it latches at the bottom.



- Install locking screw to secure cover in closed position.




CO₂ Sensor Calibration

There are two methods for CO₂ calibration available: 400 ppm baseline calibration and automatic baseline calibration (ABC).

400 ppm Baseline Calibration

400 ppm baseline calibration allows the sensor to be set at 400 ppm. Push and hold the calibration button for 3 to 5 seconds. The LED will flash green. Once the button is released, calibration is complete and the LED switches off.

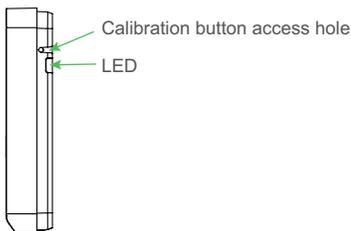


Automatic Baseline Calibration (ABC)

The ABC mode addresses the 400 ppm calibration. It allows turning on or off a background correction/recovery mode that will minimize any calibration error that has been caused by shock during handling and transportation or is caused by a long term shift in measurement. The ABC algorithm constantly keeps track of the sensor's lowest reading over a preconfigured time interval and slowly corrects for any long-term drift detected as compared to the expected fresh air value of 400 ppm. After initial startup, it is expected that the sensor reaches specified accuracy after 7 to 21 days.

Touchscreen Operation

Main Screen

The touchscreen user interface displays applicable sensor output values (temperature, RH, CO₂ and VOC), setpoint value, menu button and CO₂ stoplight status (if enabled).

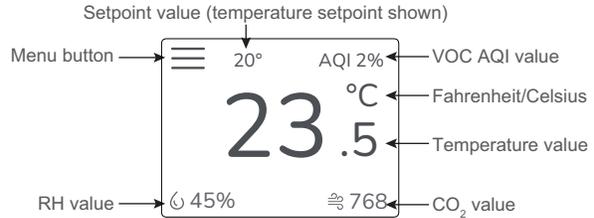

Room Temperature Display Option



Temperature Setpoint Display Option

Menu Screen

The menu screen opens when pressing the Menu button on the main screen. Integrator's submenu, occupancy/override, Fahrenheit/Celsius, settings, setpoint submenu (temp, RH and fan) and CO₂ stoplight buttons are displayed on the menu screen.



Note: RH setpoint will not appear on non-RH models.

Menu Button Functions

 **Integrator's Submenu**
Press this icon to access the Integrator's menu.

Submenu Only



 **Occupied Override Button**
Press this icon to provide momentary signal output to the controller

Single Press Only


 Signals occupied/override call to controller.

 **Fahrenheit/Celsius Switch**
Press this icon to display either °C or °F.

Single Press Only

 Changes units to Fahrenheit when pressed.

 Changes units to Celsius when pressed.

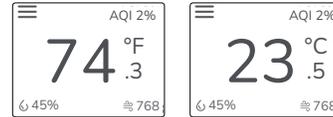

 **Settings**
This icon provides the ability to change the color scheme of the display.

Submenu Only




 **Temp Setpoint Adjustment**
Click this icon to access the setpoint change menu.
Toggle the Temp Setpoint Display button to display or hide the setpoint value on the home screen.

Submenu Only




 **Humidity Setpoint Adjustment**
Click this icon to access the setpoint change menu.

Submenu Only

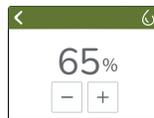

 **Fan Speed**
Click this icon to access the fan speed menu.


Submenu Only

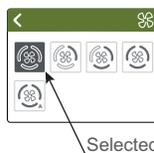

Menu Button Functions (cont.)


CO₂ Stoplight Menu
 Click this icon to toggle the CO₂ Stoplight feature on and off. With CO₂ Stoplight turned on, the background color of the main screen changes with CO₂ level. This provides a visual indicator of CO₂ levels to the room occupants.

Using the +/- buttons, the thresholds at which the colors change on the main screen are user configurable, as described in the diagram.

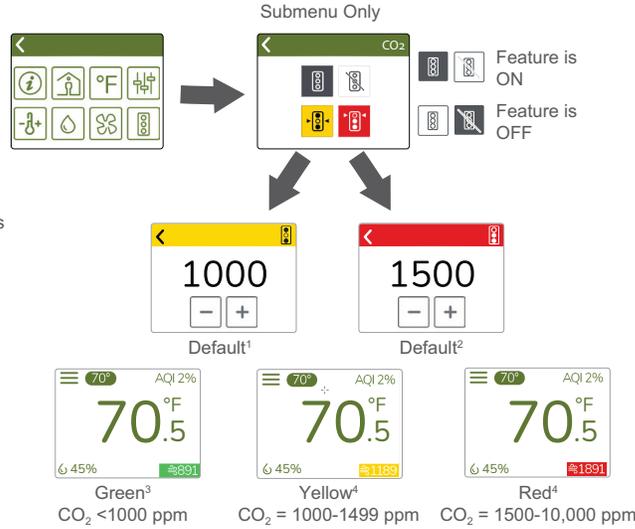


1. Values <400 ppm will be rounded up to the minimum limit of 400 ppm.
2. Values >10,000 ppm will be rounded down to the maximum limit of 10,000 ppm.
3. Possible to adjust CO₂ thresholds by changing the yellow and red limits.
4. User configurable in increments of 10 ppm using the +/- buttons. With a long press of these buttons, the number will change more quickly.

LCD Display Operation Button Functions

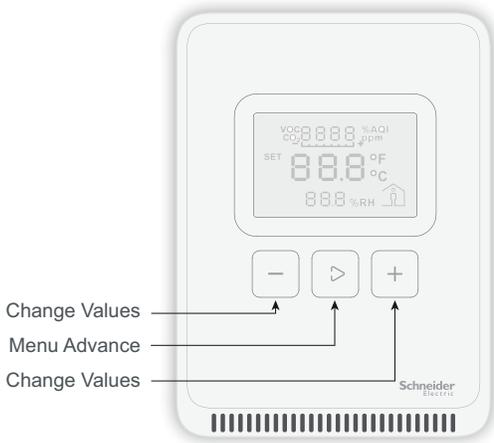

Display Icons


The main screen displays sensor values for CO₂, VOC (if equipped), RH (if equipped), temperature or temperature set-point and Celsius/Fahrenheit.

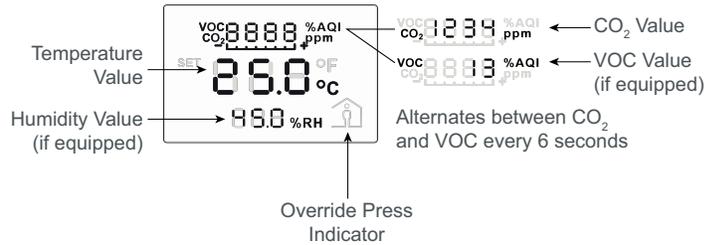

Setpoint Function


The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

Temperature Setpoint Adjustment

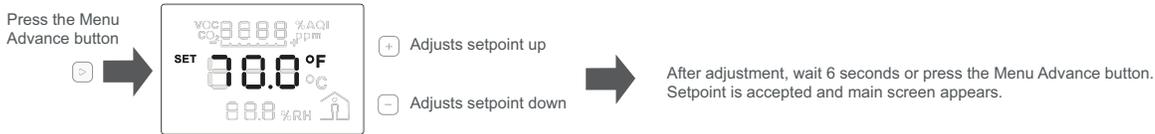


Note: Numeric information will flash while in Set mode.

RH Setpoint Adjustment

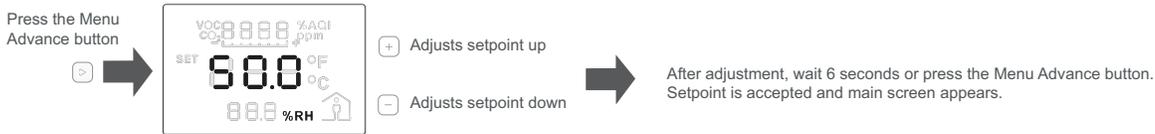

Note: Numeric information will flash while in Set mode.


Fan Speed Setpoint Adjustment

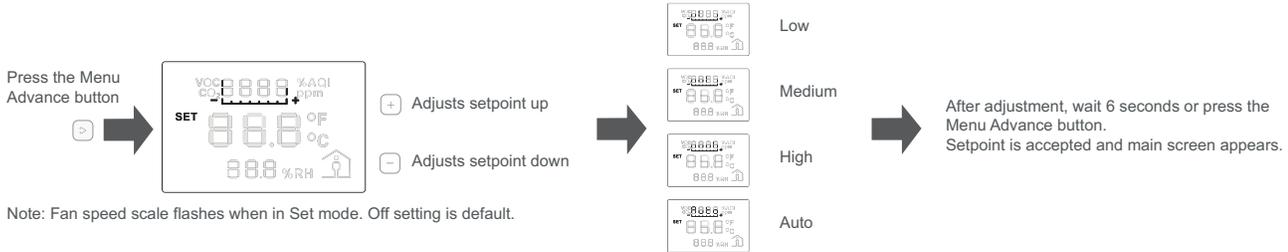

Note: Fan speed scale flashes when in Set mode. Off setting is default.

Changing Celsius and Fahrenheit Scales

The Menu Advance button cycles between Temperature, RH (if equipped), Fan Speed setpoints and Celsius/Fahrenheit adjustment screens in order.

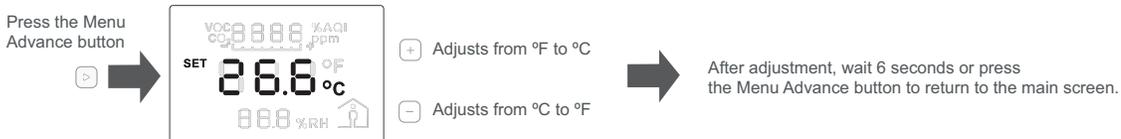

Note: °F or °C text will flash while in Set mode.

Occupied/Override Button



China RoHS Compliance Information Environment-Friendly Use Period (EFUP) Table

部件名称	有害物质 - Hazardous Substances					
Part Name	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr (VI))	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
电子件 Electronic	X	O	O	O	O	O

本表格依据SJ/T11364的规定编制。

O: 表示该有害物质在该部件所有均质材料中的含量均在GB/T 26572规定的限量要求以下。

X: 表示该有害物质至少在该部件的某一均质材料中的含量超出GB/T 26572规定的限量要求。

(企业可在此处，根据实际情况对上表中打“X”的技术原因进行进一步说明。)

This table is made according to SJ/T 11364.

O: indicates that the concentration of hazardous substance in all of the homogeneous materials for this part is below the limit as stipulated in GB/T 26572.

X: indicates that concentration of hazardous substance in at least one of the homogeneous materials used for this part is above the limit as stipulated in GB/T 26572

Z000057-0B

Schneider Electric Limited Stafford Park 5 Telford TF3 3BL United Kingdom	UK CA
---	------------------

USA: +1 888-444-1311
 Europe: +46 10 478 2000
 Asia: +65 6484 7877
www.schneider-electric.com

Life Is On

Schneider
Electric